

WTA



Installation Guide




SPRINTER VAN PLATFORM BED SYSTEM

It is crucial to ensure that all WTA products are assembled and securely attached to your vehicle. Failure to do so may result in automobile accidents, posing a significant risk of bodily injury or even death to yourself and others. As the owner, it is your responsibility to properly assemble and secure WTA products, diligently inspecting the mounting points and attachments before use, and regularly checking for any signs of wear or damage.


To guarantee optimal safety, we strongly advise engaging the services of a professional installer for the installation of any aftermarket accessories to your vehicle. If you lack mechanical experience or are unfamiliar with the installation procedures, it is imperative to have the product installed by a qualified professional or individuals who possess the necessary expertise. Remember, the responsibility lies with you, and it must be taken seriously to ensure the safety of all individuals involved.

PACKAGE CONTENTS

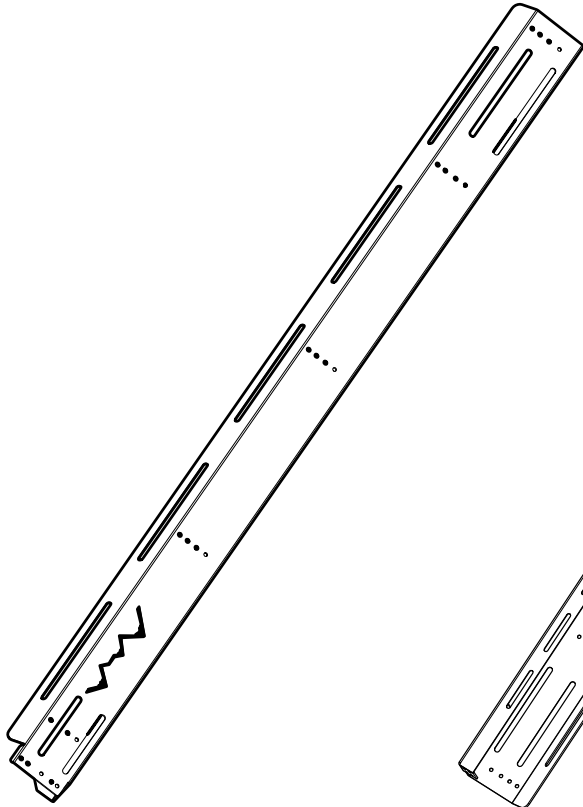


**PASSENGER
SIDE
BED RAIL**

QTY: 1

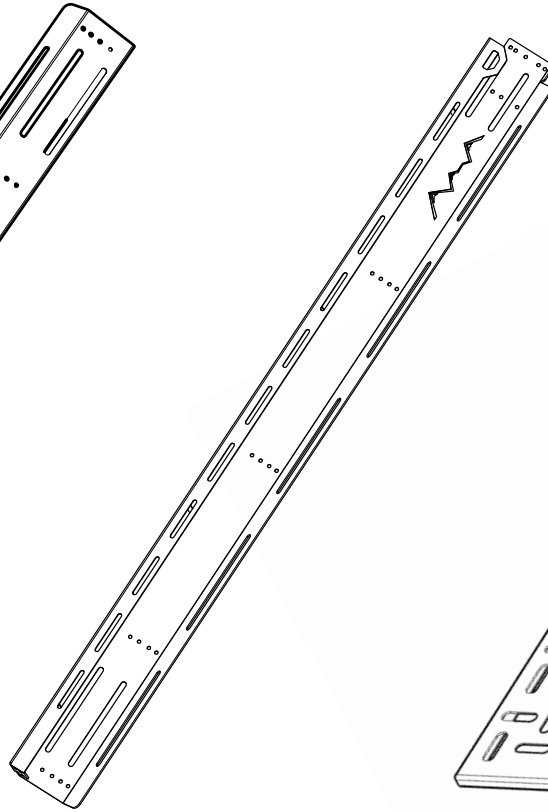


**DRIVER
SIDE BED
RAIL**

QTY: 1

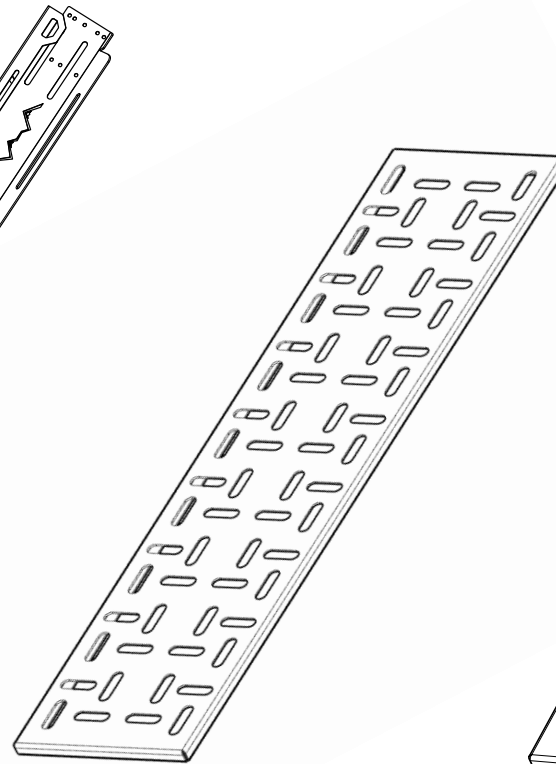

BED PANEL


QTY: 4

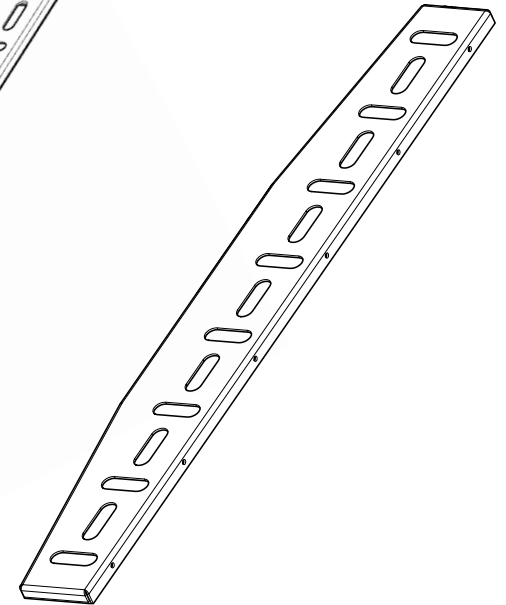

REAR BED PANEL


QTY: 1

HARDWARE

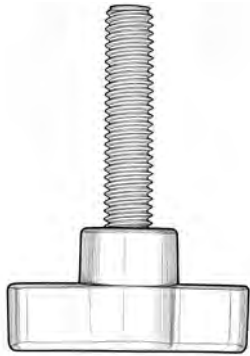


HAND SCREW

QTY: 8

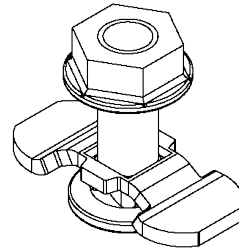

L-TRACK STUD

QTY: 8

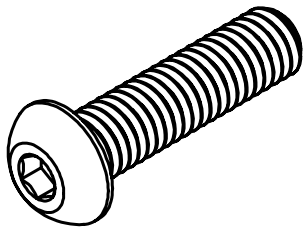


M8*40 BUTTON HEAD SCREW

QTY:6



M8 FLAT WAHSER

QTY:6

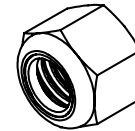

M8 NYLON LOCK NUT

QTY:6


INSTALL

STEP | 01 LAYOUT AND INSTALL PREP

1.1 L-Track Studs are included for installing bed rails to the L-Track of your Wall Panel Kit

1.2 White top adventures Bed Brackets, you can buy it from our web. Using rivet pin to install to your wall


1.3 Layout all parts ,check the quantity

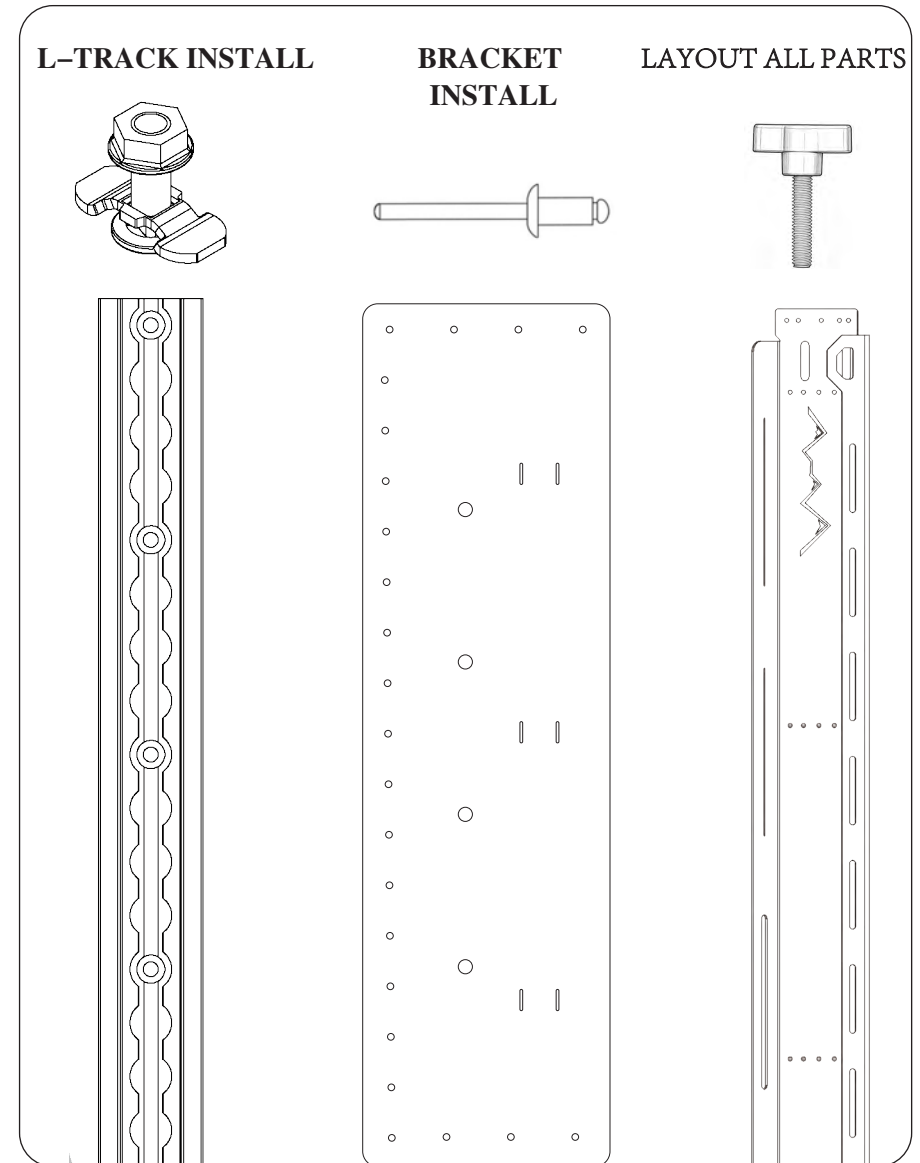

STEP | 02 HEIGHT SELECTION

2.1 Select desired height of bed.


NOTE- The height range for rail install is about 37" - 55.5"

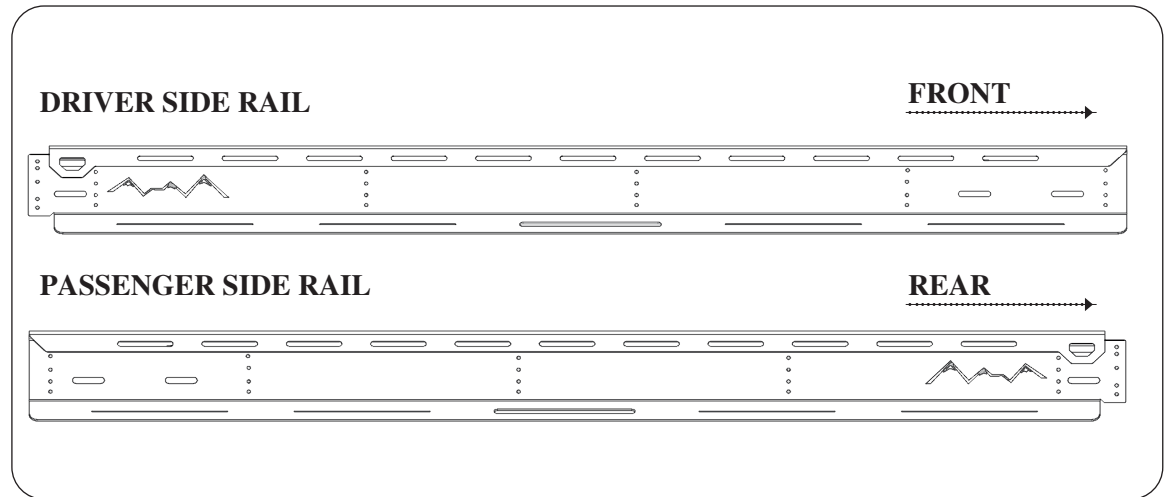

STEP | 03 INSTALL PREP

3.1 Install Rear BED PANEL on one BED PANEL using M8*40 button head screw ,flat washer and M8 nylon lock washer.

3.2 Secure the SUPPORT BLOCK to SIDE BED RAIL with M6*12 button head screw.



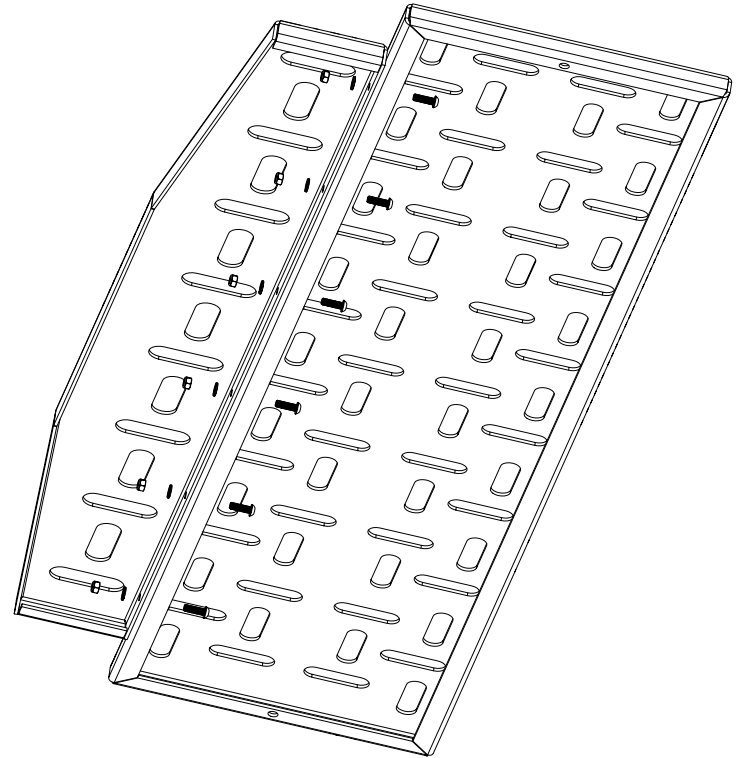


STEP | 04 RAIL-TO-VAN INSTALL PANEL KIT WITH L-TRACK

4.1 See mounting slots highlighted , These are designed to accomodate L-Track Studs for use when attaching Bed Rails to L-Track.

4.2 Raise bed rails up to L-Track, align mounting slots to desired location and insert L-Track Studs to corresponding L-Track Key ways. Secure L-Track Stud with Wing.




4.3 Tuck the rear end of the rail behind the Adwag Rear Corner Trim if applicable and secure rail using L-Track Stud Nuts and a 13mm Wrench

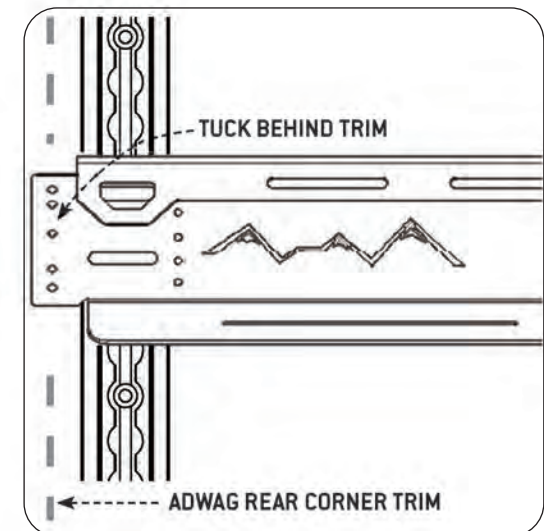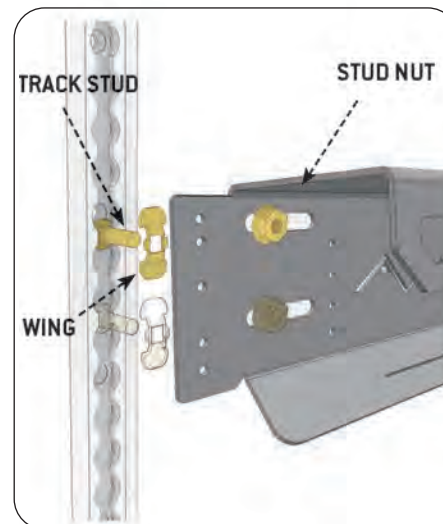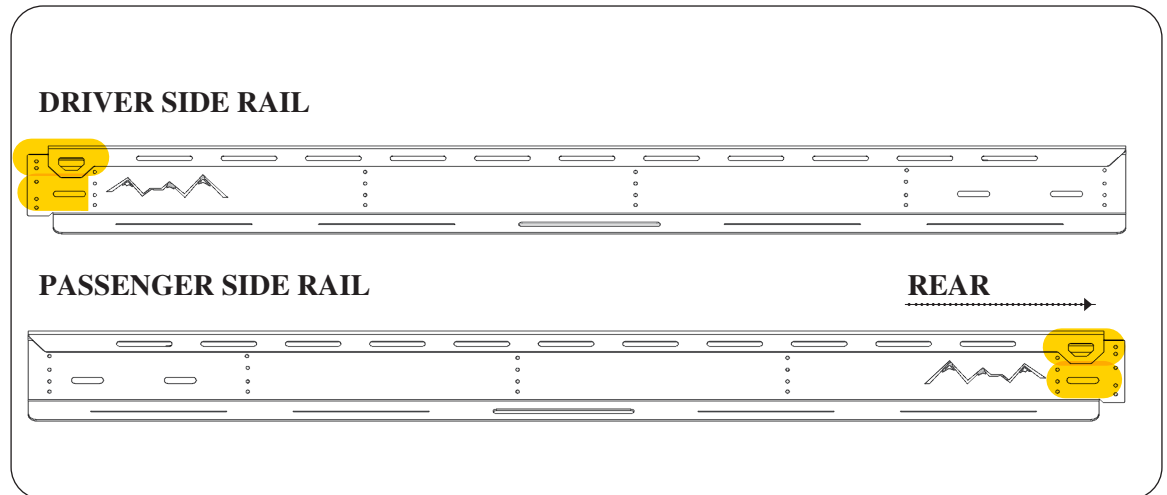

STEP | 05 PLACING BED PANELS

5.1 Once you have the bed rails up and fully mounted, you can simply place the bed panels on and fasten them to the rails using the M8 Hand screw

NOTE - Periodically inspect the fasteners to ensure they remain tight.

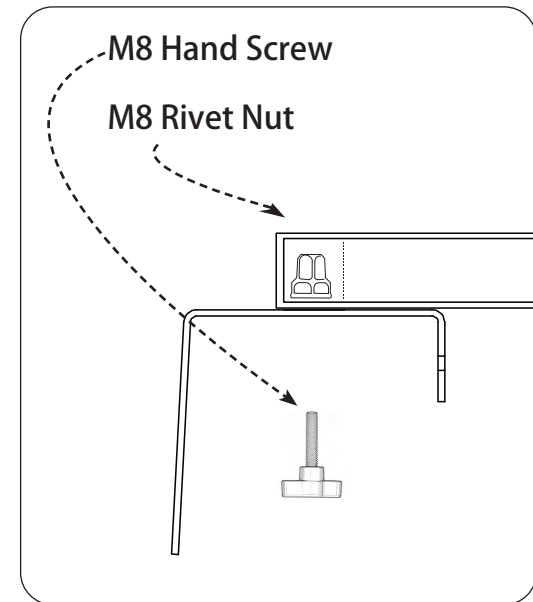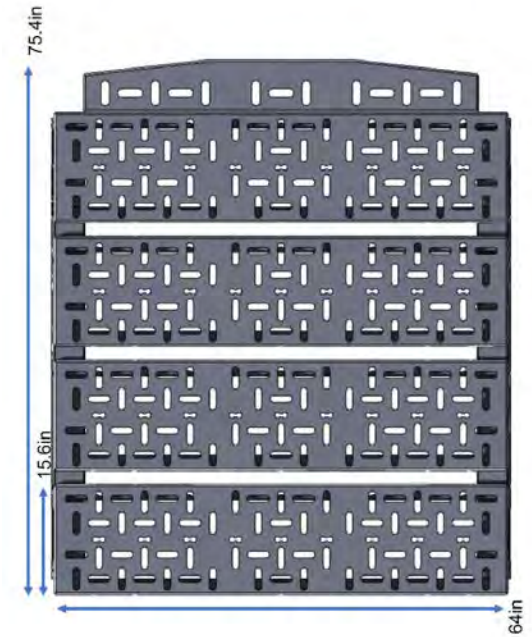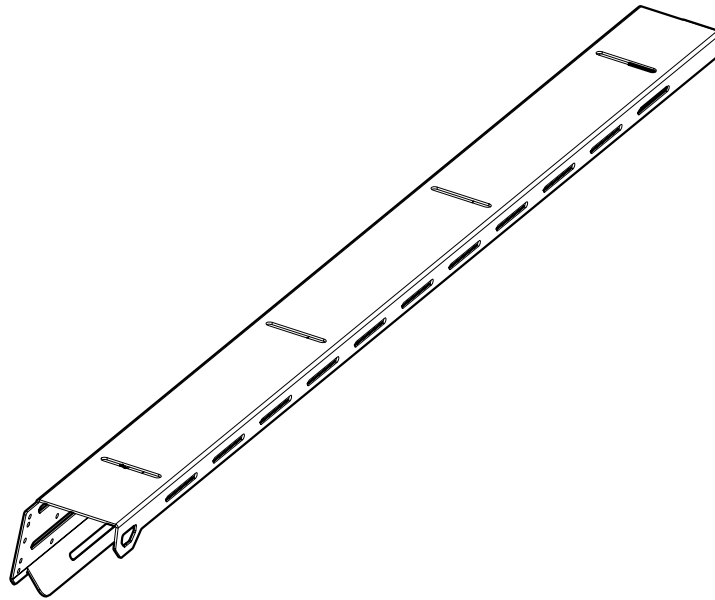

GET THERE WITH WHITE TOP ADVENTURES



info@whitetopadventures.com



thanks!