
WTA

Installation Guide

Sprinter 48" cabinet


It is crucial to ensure that all WTA products are assembled and securely attached to your vehicle. Failure to do so may result in automobile accidents, posing a significant risk of bodily injury or even death to yourself and others. As the owner, it is your responsibility to properly assemble and secure WTA products, diligently inspecting the mounting points and attachments before use, and regularly checking for any signs of wear or damage.

To guarantee optimal safety, we strongly advise engaging the services of a professional installer for the installation of any aftermarket accessories to your vehicle. If you lack mechanical experience or are unfamiliar with the installation procedures, it is imperative to have the product installed by a qualified professional or individuals who possess the necessary expertise. Remember, the responsibility lies with you, and it must be taken seriously to ensure the safety of all individuals involved.

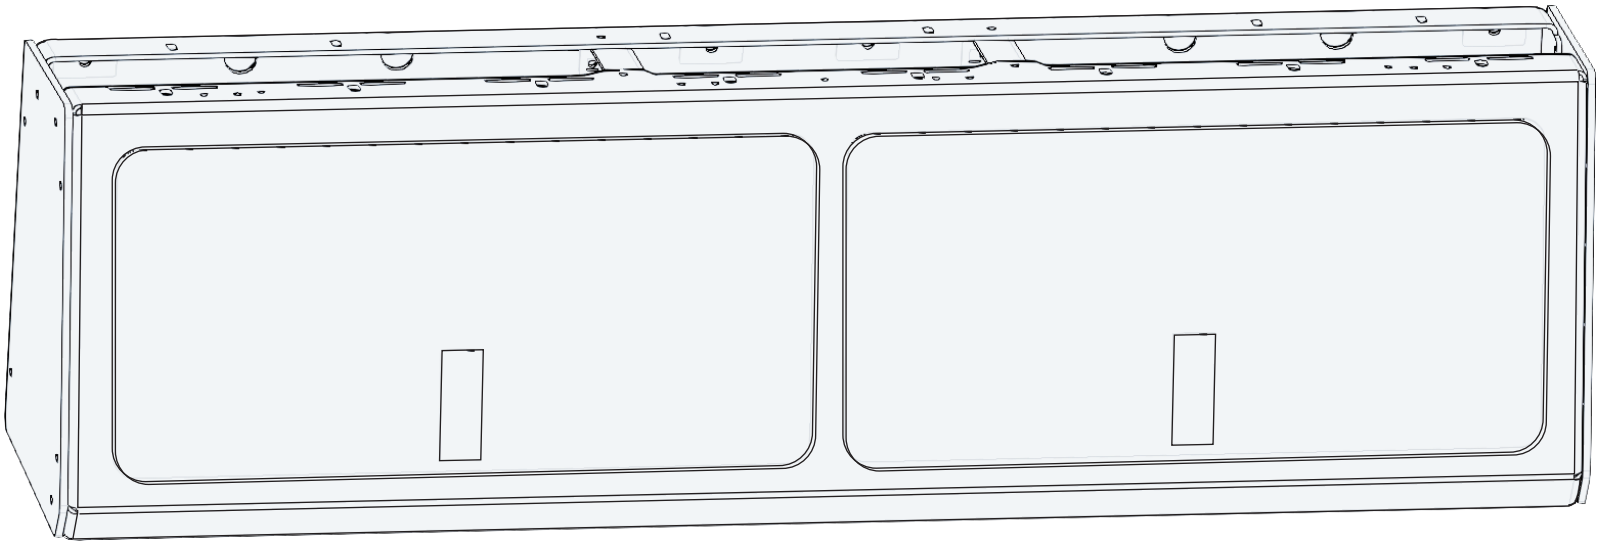


IN THE BOX


Before starting to build your new Cabinet let's make sure you have everything you need. If anything is missing please reach out to Info@WhiteTopAdventures.com and we will get it out to you right away.

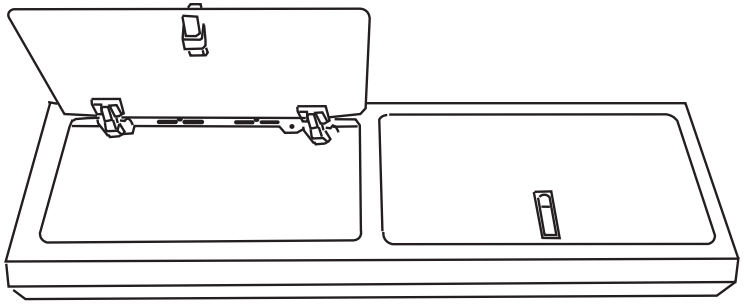


FRONT PANEL

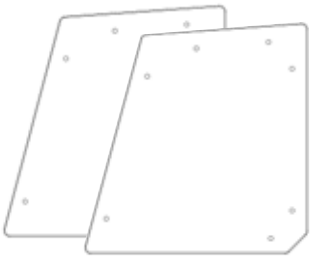

(2) SIDE PANELS

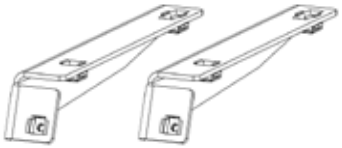


(2) SUPPORT BRACKETS

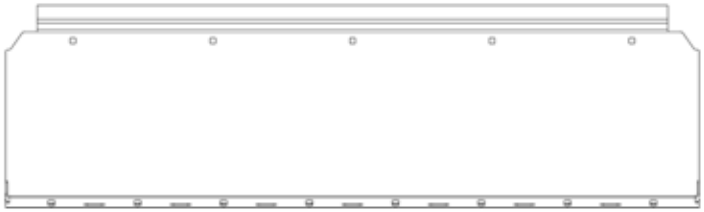

BOTTOM PANEL




WALL BRACKET

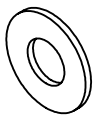

M6 FLAT WASHER

QTY:10

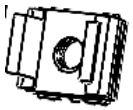

M6 CAGE NUT

QTY:15




WALL BRACKET WASHERS

QTY:4



M6 NYLON LOCKNUT

QTY:10

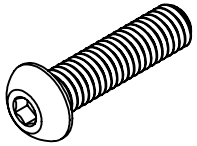

M6 BOLTS


QTY:25

HARDWARE PACKAGE

MAIN PANEL INSTALL

HARDWARE BAG
MAIN PANEL KIT


Our first step is to attach the front panel to the bot-tom panel. First install the (5) cage nuts into the bottom panel. Next place the front panel below the bottom panel and install the screws from the bottom of the cabinet into the cage nuts.

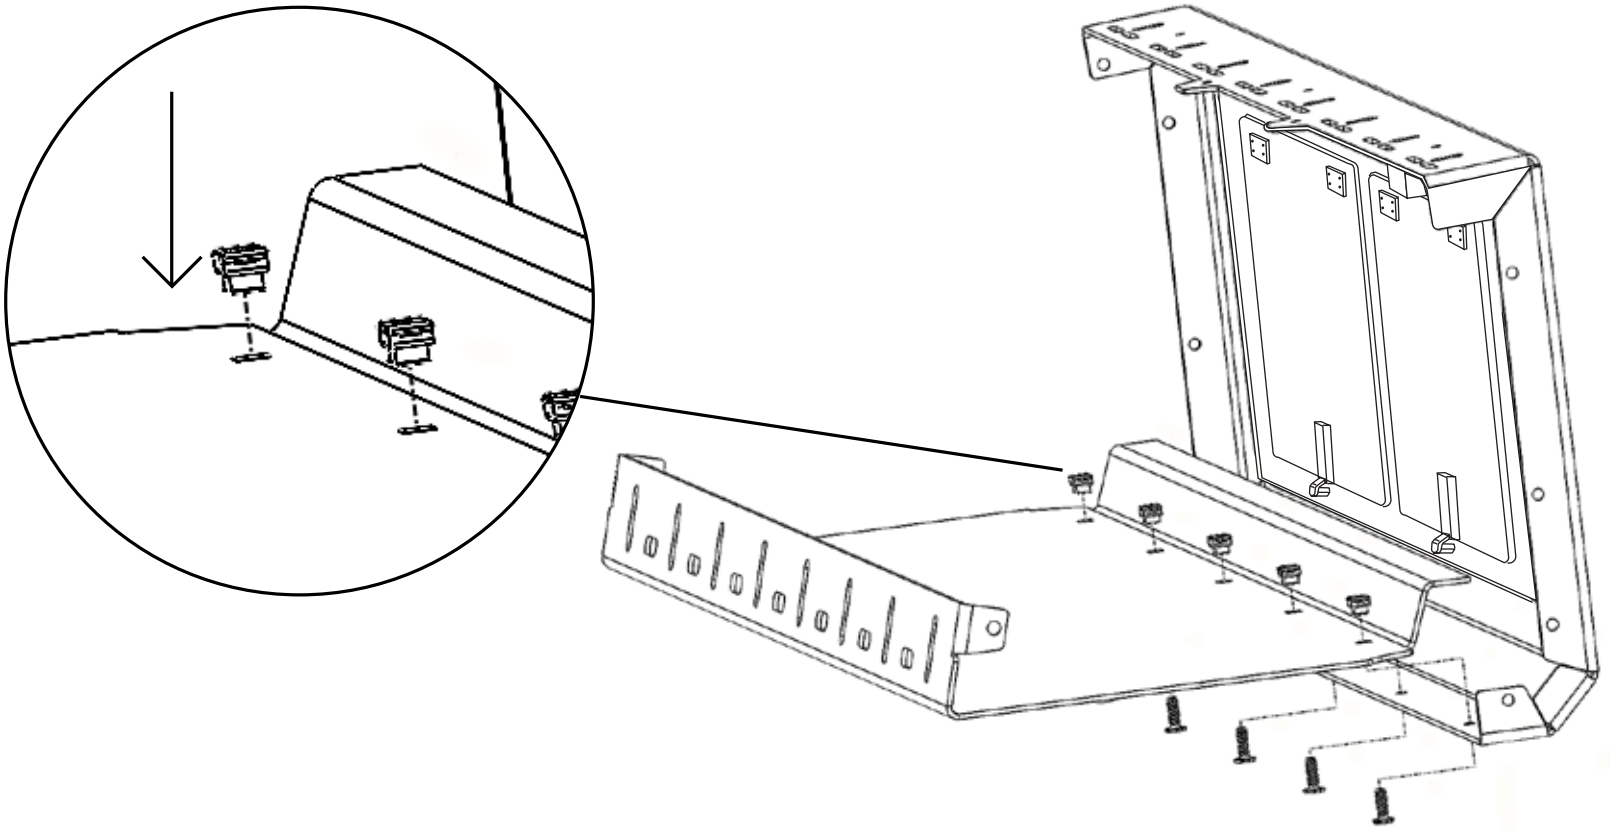

SIDE PANELS

HARDWARE BAG
SIDE PANEL KIT


Install the side panels using the (5) screws, nuts and washers per side. Line the side panel up with the holes on the metal panels and place the screws through the side panel and metal panel. Use the washers and nuts on the back to tighten. Repeat for both sides of the cabinet.

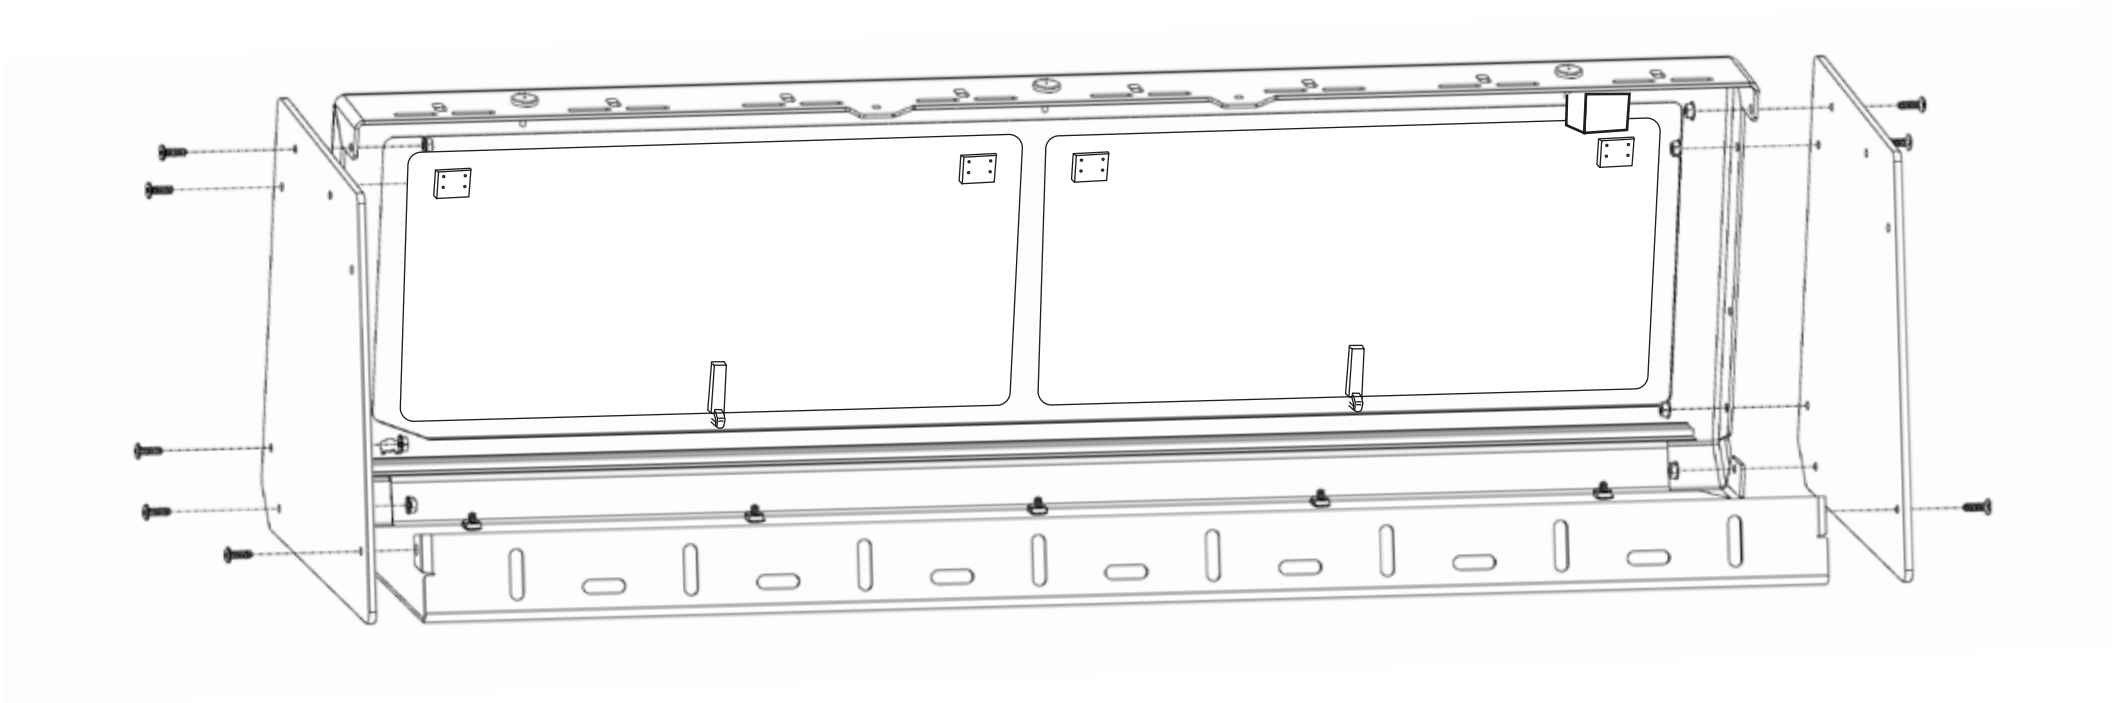


CROSS BRACES

HARDWARE BAG
CROSS BRACE KIT

Install (3) cage nuts into each Support Bracket as shown below. Using a flat head screw driver can help setting the cage nuts in place. Place one side of the cage nut in the hole and apply pressure with the screw driver on the other side. When done right you will hear them click into place.

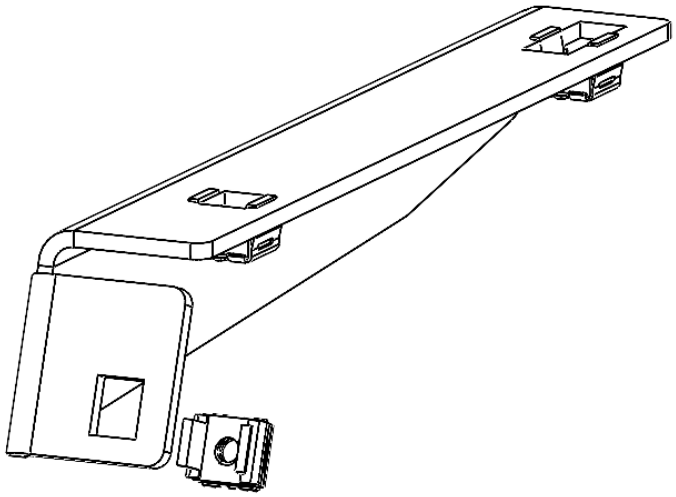


There are two locator tabs where the braces are meant to be placed. Install the screws from the top of the front panel into the cross braces. Do not fully tighten as we need them to be adjustable now and will tighten them in the next step.

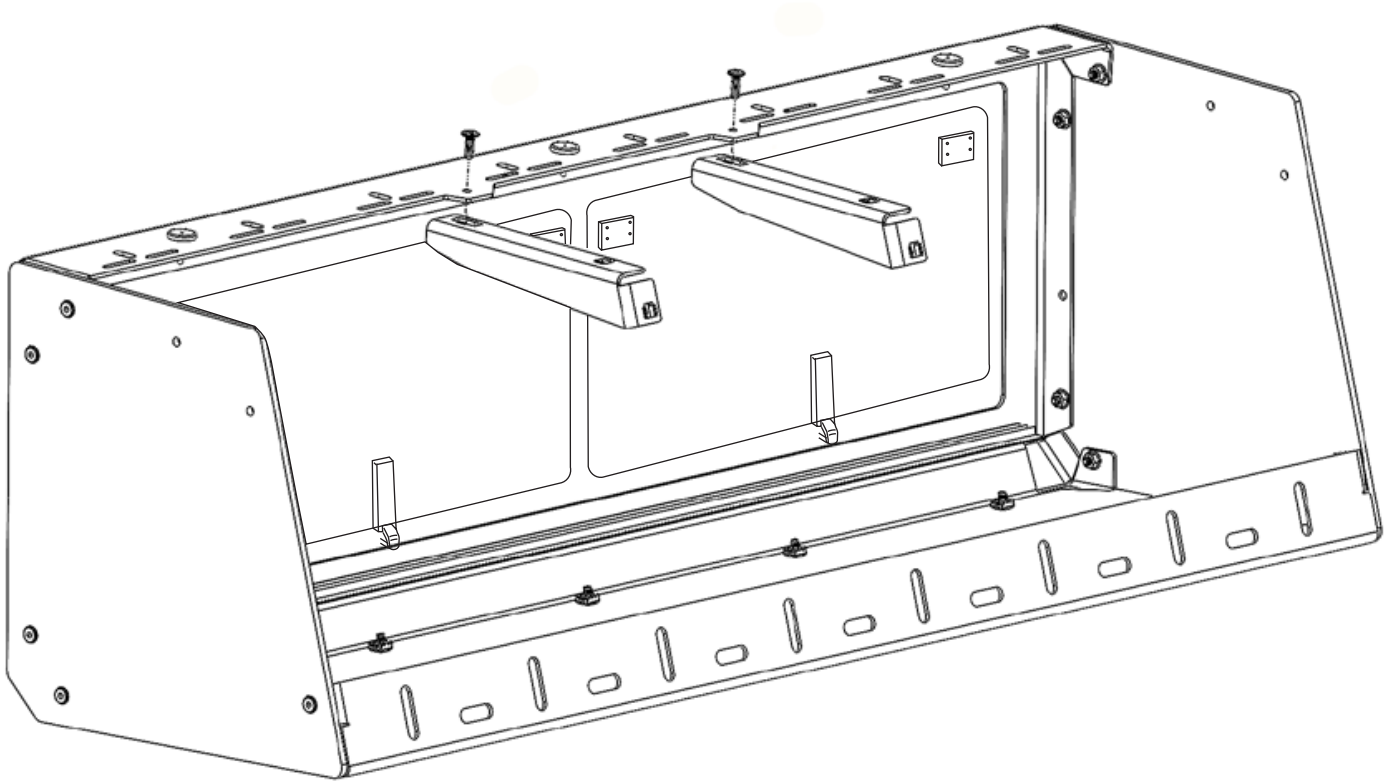

WALL BRACKET

HARDWARE BAG
WALL BRACKET KIT


Install the (4) clip nuts from the inside of the wall brace.

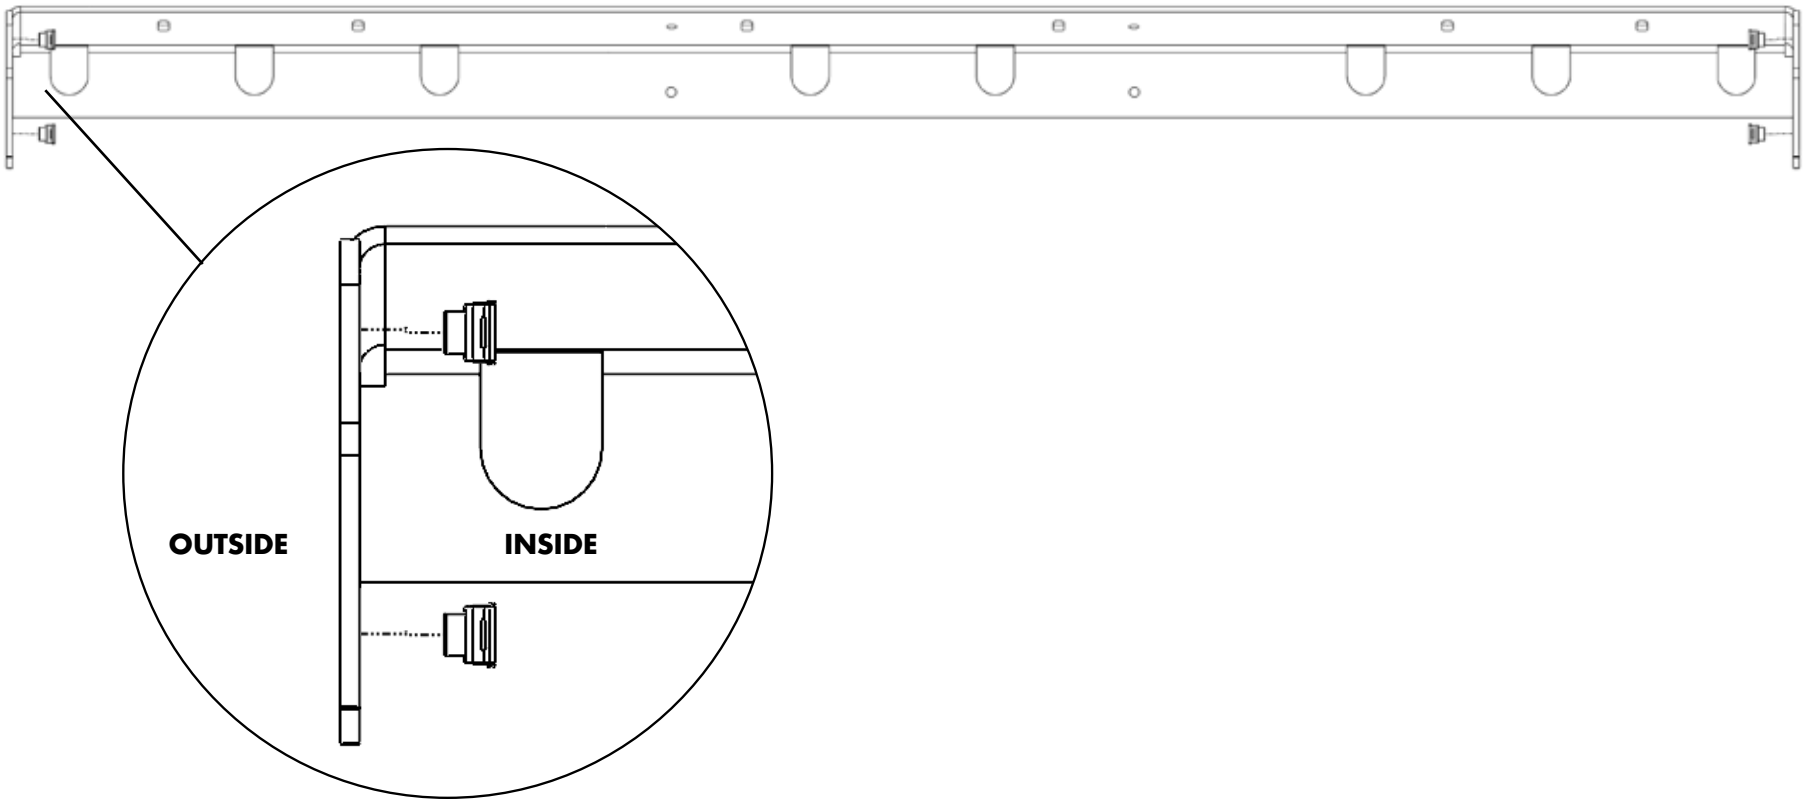


WALL BRACKET

HARDWARE BAG
CROSS BRACE KIT

Place the wall bracket on the inside of both side panels. The wall bracket should sit on top of the Support Brackets. Insert the (4) screws into the (4) rear cage nuts in the Support Brackets.

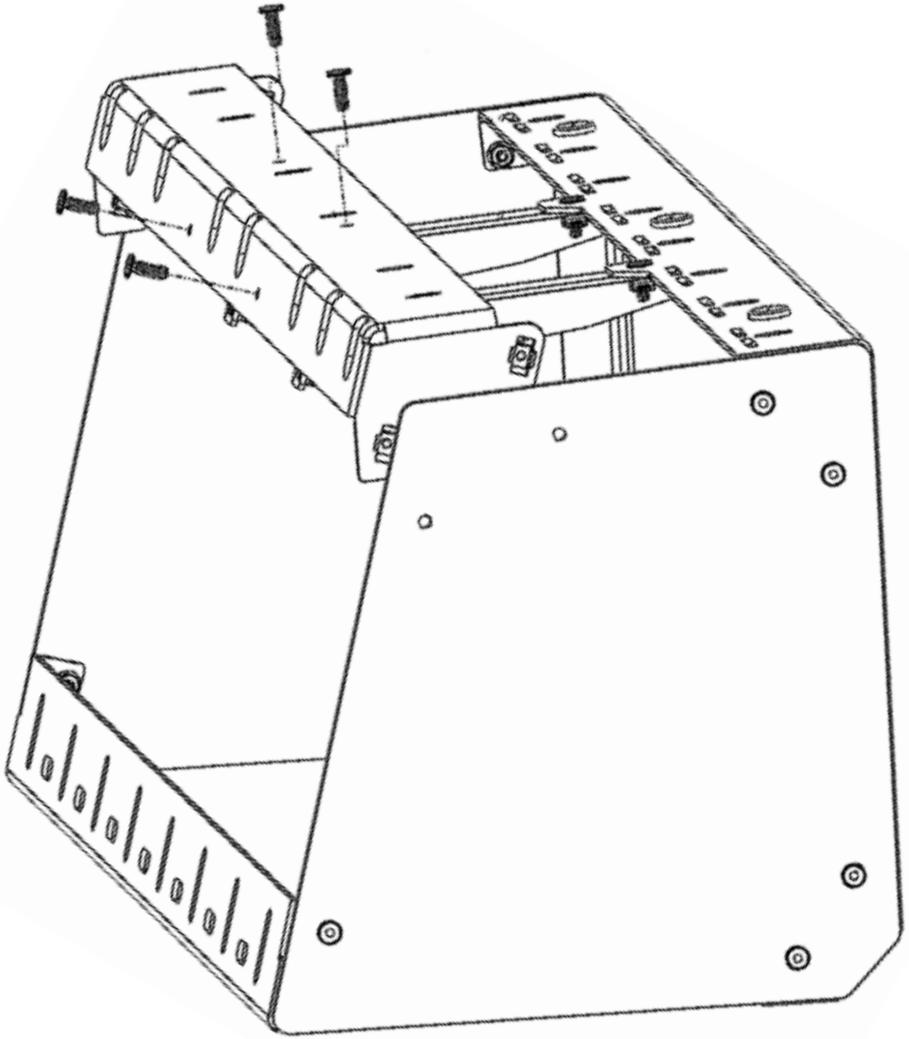


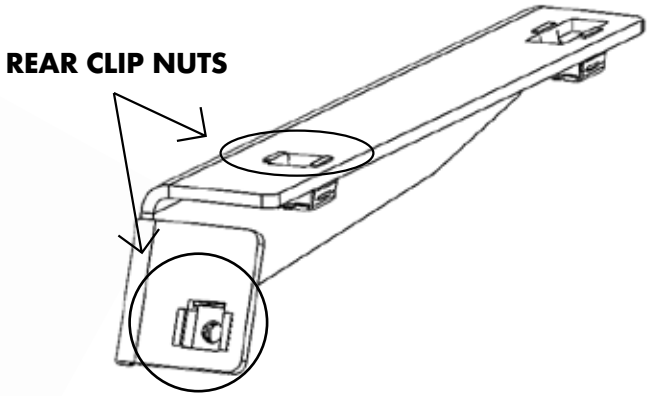


WALL BRACE

HARDWARE BAG
WALL BRACKET KIT

Install the (4) screws through the side panels into the wall bracket. Then go back and check and tighten all installed screws.

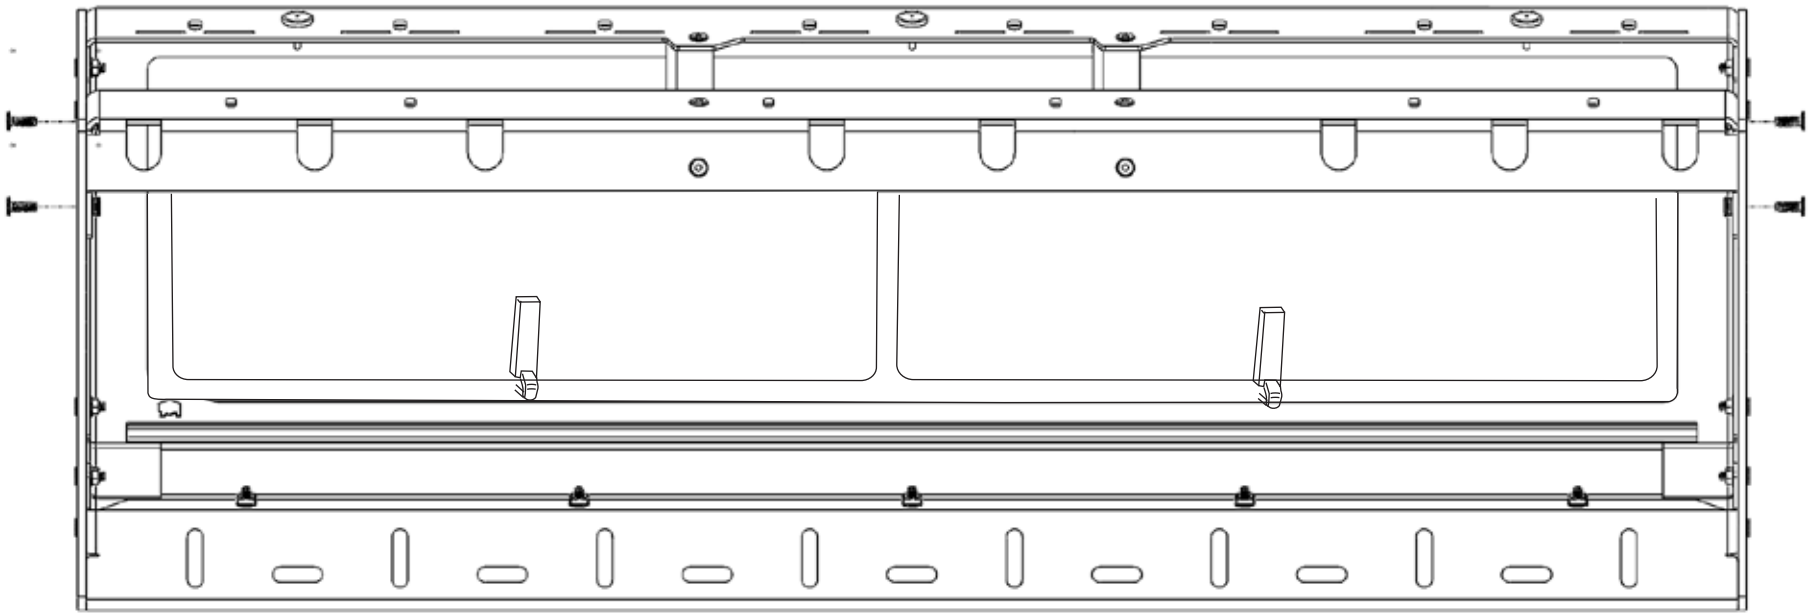

THAT'S A WARP!

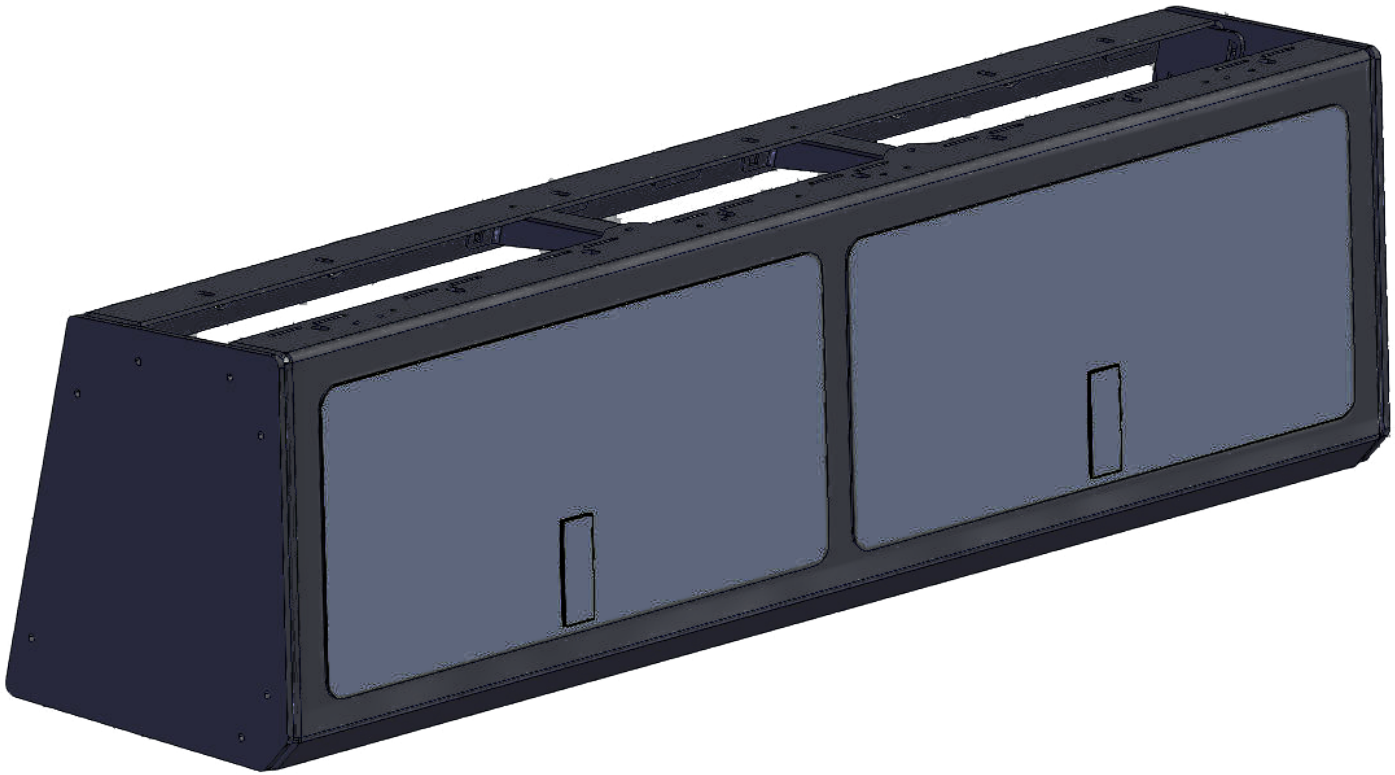

GET THERE WITH WHITE TOP ADVENTURES

info@whitetopadventures.com

thanks!