

WTA



Installation Guide




Sprinter Bed L-TRACK

It is crucial to ensure that all WTA products are assembled and securely attached to your vehicle. Failure to do so may result in automobile accidents, posing a significant risk of bodily injury or even death to yourself and others. As the owner, it is your responsibility to properly assemble and secure WTA products, diligently inspecting the mounting points and attachments before use, and regularly checking for any signs of wear or damage.


To guarantee optimal safety, we strongly advise engaging the services of a professional installer for the installation of any aftermarket accessories to your vehicle. If you lack mechanical experience or are unfamiliar with the installation procedures, it is imperative to have the product installed by a qualified professional or individuals who possess the necessary expertise. Remember, the responsibility lies with you, and it must be taken seriously to ensure the safety of all individuals involved.

PACKAGE CONTENTS

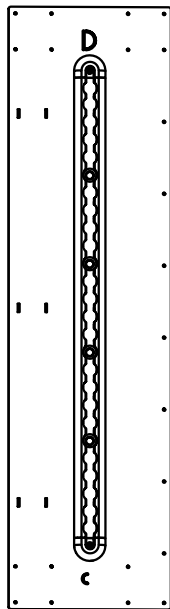


DRIVER SIDE FRONT
BRACKET

QTY: 1

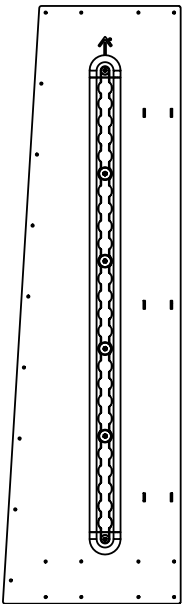


DRIVER SIDE REAR
BRACKET

QTY: 1

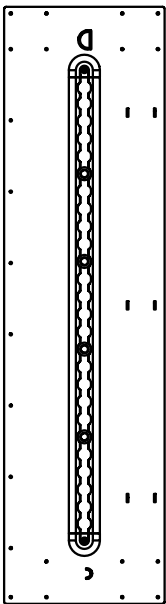

PASSENGER SIDE FRONT
BARCKET


QTY: 1

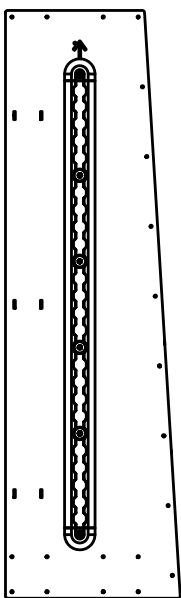

PASSENGER SIDE REAR
BRACKET

QTY: 1

HARDWARE

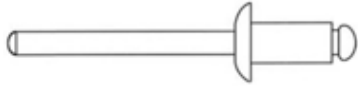

RIVETS 1/4"--1/2"

QTY: 90

INSTALL

STEP 01 LAYOUT AND MARK 1.1

Layout all parts and check the quantity's

1.2 Align the L-TRACK rails Locations:

Place the L-Track rails on the wall of your van, align the rails to be perpendicular to the ground and at the height you desire.

You can mark the holes or use a few self tapping screws to hold it in place.

1.3 Drill and Mount L-TRACK:

Use a 1/4" drill bit to drill holes through the panel and through the supporting metal of the van wall. work your way around the panel as you do this alternate between drilling and mounting rivets in the newly drilled holes to prevent the panel from moving. once all empty holes are filled with locked rivets remove the self tapping screws, drill the holes and lock rivets in those holes. clean the edges of any burs after drilling and clean any metal shavings in between drilling.



1 4 Check all rivets are fixed tightly



STEP 03 INSTALL L-TRACK STUD

3.1 Tuck the rear end of the rail behind the Adwag or other Rear Corner Trim if applicable.

3.2 Select the height you like ,secure rail using L-Track Stud Nuts and a 13mm Wrench

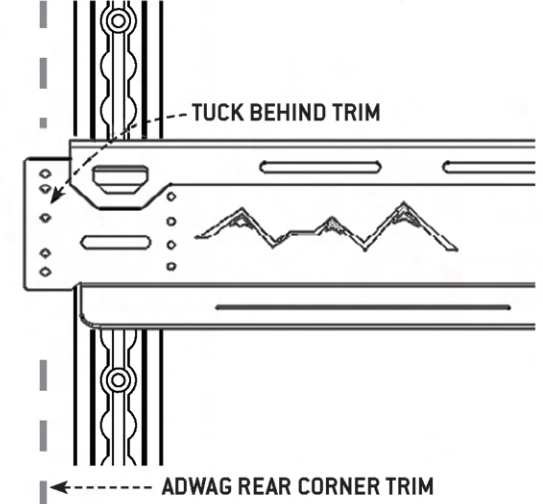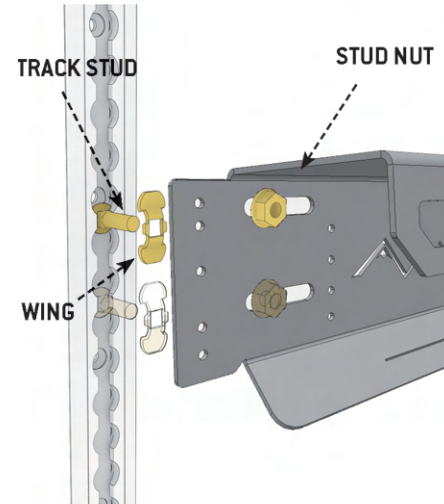

GET THERE WITH WHITE TOP ADVENTURES



info@whitetopadventures.com



thanks!