


SPRINTER LOWER REAR DOOR PANELS

△ Please read all steps before you begin. Out There Vans is not responsible for any damage that results from improper installation.

What's Included:

Sprinter Lower Rear Door Panels (Pair)

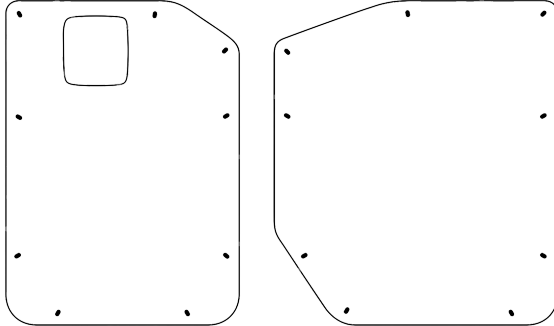

Passenger Side

Driver Side

You Will Need:

- Electric drill
- Hand or drill rivnut tool if installing with rivnuts
- 4mm allen hex key
- Automotive trim removal tool or flathead screwdriver

Optional Hardware Kit Includes:

- (18) M6 Rivnuts
- (18) M6x20mm bolts
- (18) Washers

INSTALLATION TIPS

1. For the longevity of this product, you will need to either prime and paint or stain and seal this product before installing it in your van. Sand with fine grit sandpaper before applying paint or stain.
2. Door panels may be installed with factory push connects or rivnuts/bolts. We highly suggest rivnuts for the most secure & long lasting installation.
3. If your van has factory installed plastic lower rear door panels, use an automotive trim removal tool or flathead screwdriver to remove the push connects and remove the plastic door panels.
4. The holes in the door panels align with the pre-stamped holes in the sheetmetal of your van. Factory stamped holes are slightly too big for M5 bolts and slightly too small for M6 bolts. To install with our hardware kit, you will need to use an electric drill to enlarge the holes to $\frac{3}{8}$ " diameter. We highly recommend using a step down drill bit to do this in order to avoid drilling through the exterior sheet metal.
5. If you purchased the hardware kit, use a rivnut setting tool to set the rivnuts, and then use a 4mm allen hex key to install the bolts, ensuring to place a washer on each bolt before installing. Lightly tighten each bolt at first until all of the bolts are placed, and then go back through to finish tightening the bolts. This will allow you to make sure that the panels are properly aligned for each bolt hole before fully tightening the bolts.

Sprinter Door Cards Installation Video



How to Use Rivnuts Video



Scan this QR code to view our video instructions or type in this URL into your web browser

Sprinter Door Cards Video: https://youtu.be/9QnoqV_vJEO

Rivnut Video: <https://youtu.be/OXa0jNtW1s8?si=TwNwZjHmug-UI0fT>