


SPRINTER MIDDLE REAR DOOR PANELS

△ Please read all steps before you begin. Out There Vans is not responsible for any damage that results from improper installation.

What's Included:

Sprinter Middle Rear Door Panels (Pair)

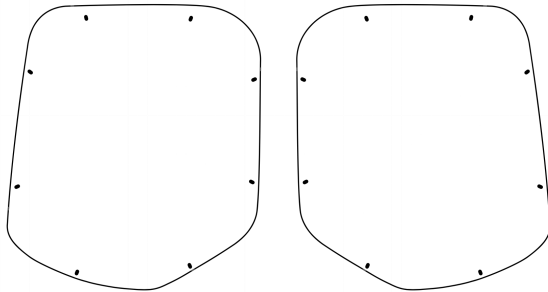

Passenger Side

Driver Side

Hardware Kit Includes:

(16) U spring nuts
(16) M6 x 10mm bolts
(16) Washers

You Will Need:

-4mm allen hex key
-Automotive trim removal tool or flathead screwdriver (only necessary if you need to remove factory installed plastic middle rear door panels)

INSTALLATION TIPS

1. For the longevity of this product, you will need to either prime and paint or stain and seal this product before installing it in your van. Sand with fine grit sandpaper before applying paint or stain.
2. If your van has factory installed plastic middle rear door panels, use an automotive trim removal tool or flathead screwdriver to remove the push connects and remove the plastic door panels.
3. Middle rear door panels are installed in the stamped middle section of your van's rear doors where rear windows would be located. The outer edge of this stamped area has raised lips that correspond with the locations of the predrilled holes on the baltic birch door panels. Push a U spring nut from the included hardware kit onto each of these raised lips, making sure that the threaded opening on each U spring nut is facing towards you. You will install eight U spring nuts on each door. After installing the U spring nuts, hold up the birch door panel to align with the stamped area in the door and adjust the U spring nuts as needed to align with the predrilled holes in the door panels.
4. Use a 4mm allen hex key to install the bolts, ensuring to place a washer on each bolt before installing. Lightly tighten each bolt at first until all of the bolts are placed, and then go back through to finish tightening the bolts. This will allow you to make sure that the panels are properly aligned for each bolt hole before fully tightening the bolts.

Sprinter Door Cards Installation Video



Scan this QR code to view our video instructions or type in this URL into your web browser

Sprinter Door Cards Video: https://youtu.be/9QnoqV_vJEO