

WTA



Installation Guide







Transit Bed Bracket - Middle Roof

It is crucial to ensure that all WTA products are assembled and securely attached to your vehicle. Failure to do so may result in automobile accidents, posing a significant risk of bodily injury or even death to yourself and others. As the owner, it is your responsibility to properly assemble and secure WTA products, diligently inspecting the mounting points and attachments before use, and regularly checking for any signs of wear or damage.

To guarantee optimal safety, we strongly advise engaging the services of a professional installer for the installation of any after market accessories to your vehicle. If you lack mechanical experience or are unfamiliar with the installation procedures, it is imperative to have the product installed by a qualified professional or individual who possess the necessary expertise. Remember, the responsibility lies with you, and it must be taken seriously to ensure the safety of all individuals involved.

PACKAGE CONTENTS



DRIVER SIDE FRONT
BRACKET

DRIVER SIDE REAR
BRACKET

PASSENGER SIDE FRONT
BARCKET

PASSENGER SIDE REAR
BRACKET


QTY: 1

QTY: 1


QTY: 1

QTY: 1

HARDWARE

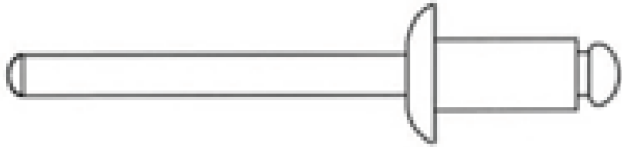

RIVETS

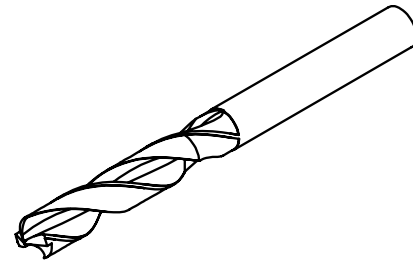

SHORT STEEL DRILL BIT

INSTALL

STEP | 01 LAYOUT AND INSTALL PREP

1.1 Driver Side Alignment Locations: See FIG 1 for alignment hole locations for Driver Side Bracket installation.

1.2 Passenger Side Alignment Locations: See FIG 2 for alignment hole locations for Passenger Side Bracket installation

NOTE - This install requires the removal of any interior panels that span the locations shown in FIG 1 and 2.

NOTE - The Bed Brackets may not be compatible with certain trim ring configurations.


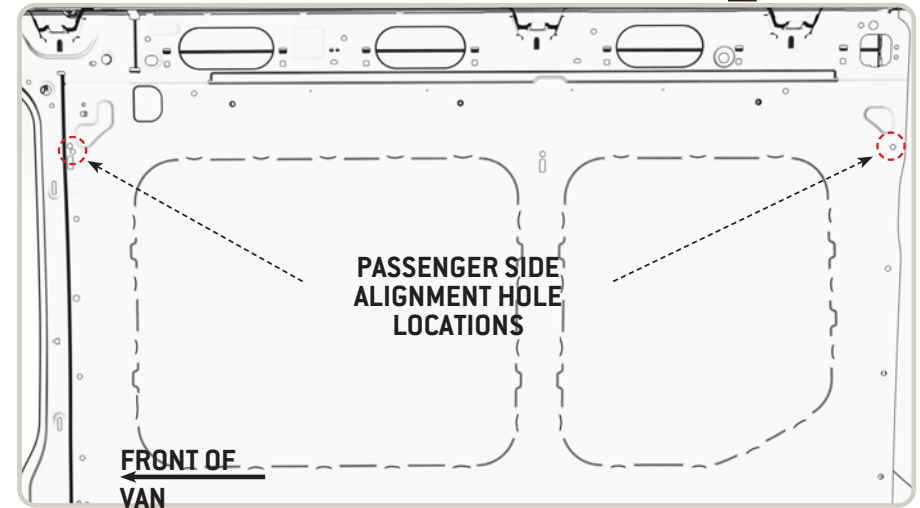


FIG 2

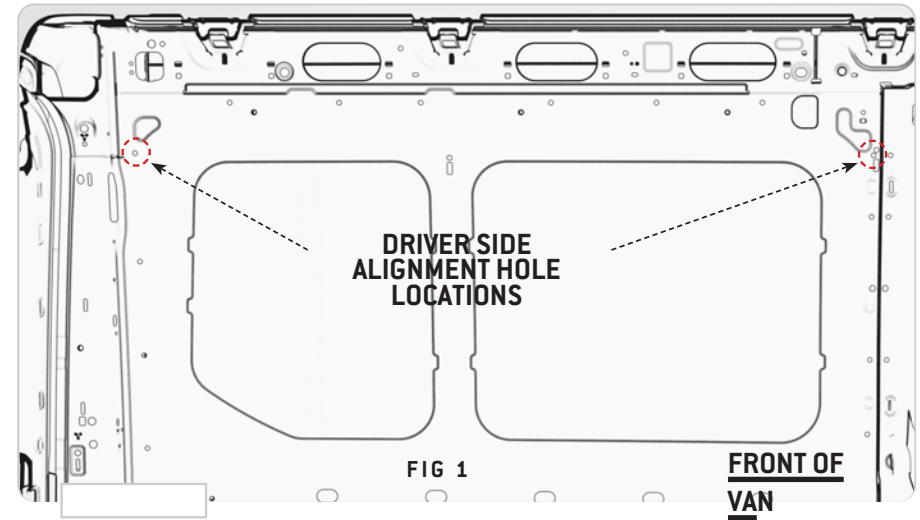

STEP 02 DRIVER SIDE BRACKETS

2.1 Align Driver Side Front Bracket: Align the Driver Side Front Bracket to the Alignment Point as shown in FIG 3. There should also be a Body Seam that you can use as a visual guide.

2.2 Set the Driver Side Front Bracket into place by driving three self tapping screws through the Rivet Holes to hold it in place.

2.3 Align Driver Side Rear Bracket: Align the Driver Side Rear Bracket to the Alignment Point as shown in FIG 4.

2.4 Set Driver Side Rear Bracket Into Place by driving three self tapping screws through the Rivet Holes to hold it in place.

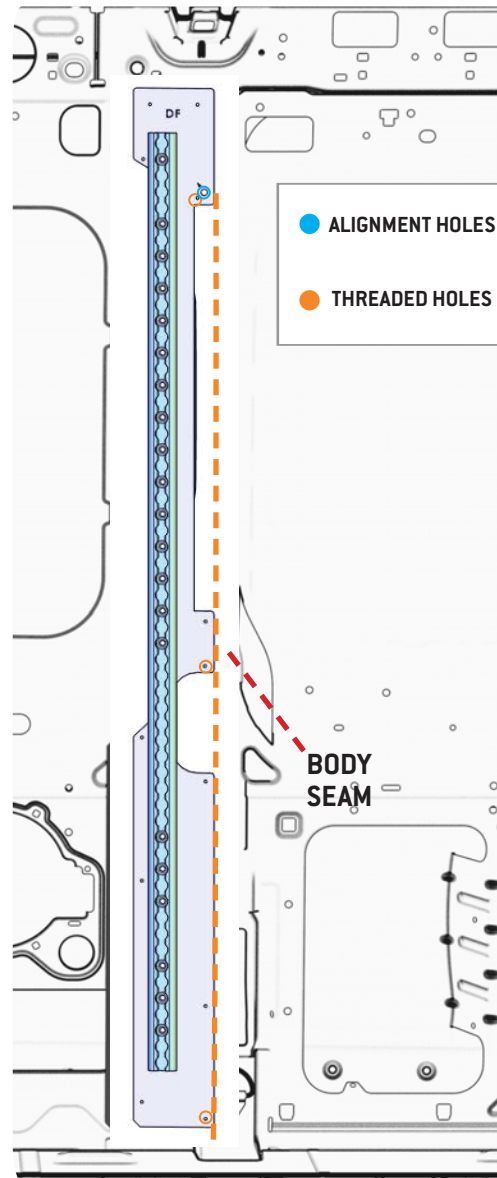


FIG 3

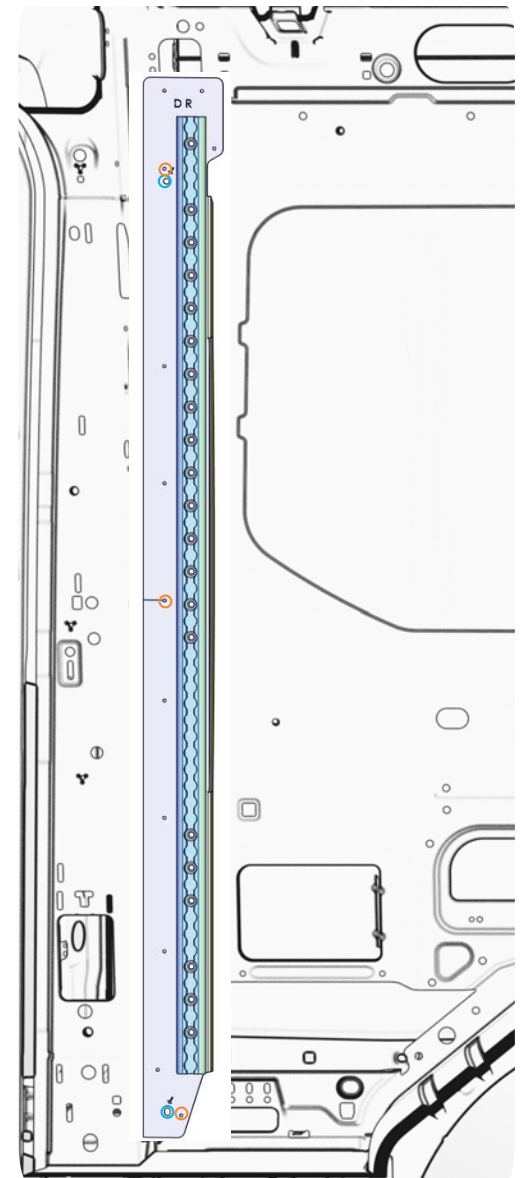


FIG 4

STEP | 03 PASSENGER SIDE BRACKETS

3.1 Align Passenger Side Front Bracket: Align the Passenger Side Front Bracket to the Alignment Point as shown in FIG 5. There should also be a Body Seam that you can use as a visual guide.

3.2 Set the Passenger Side Front Bracket into place with clamps or by driving three self tapping screws through the Rivet Holes to hold it in place.

3.3 Align the Passenger Side Rear Bracket to the Alignment Point as shown in FIG 6.

3.4 Set the Passenger Side Rear Bracket into place with clamps or by driving three self tapping screws through the Rivet Holes to hold it in place.

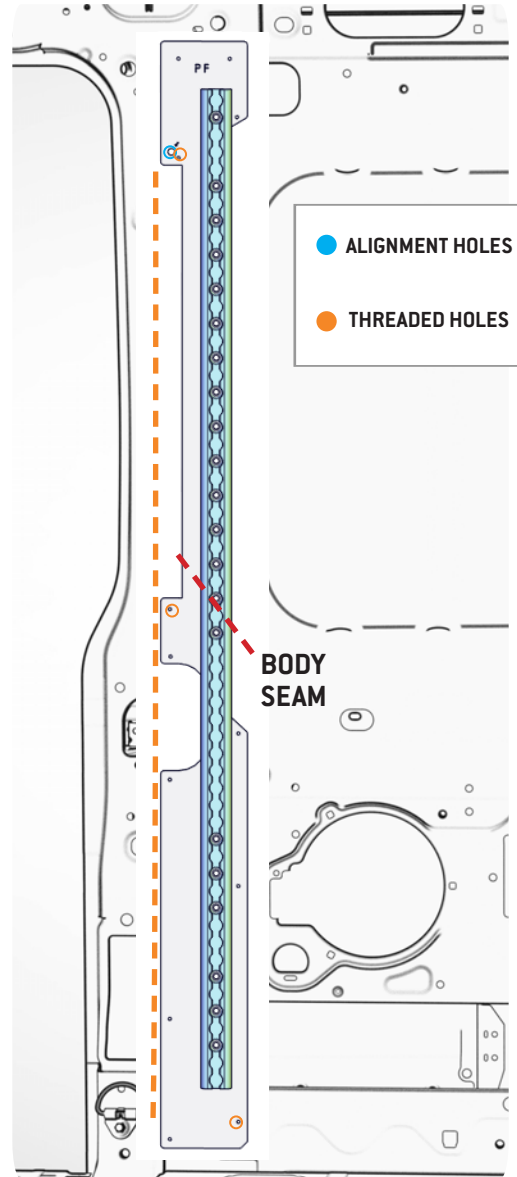


FIG 5

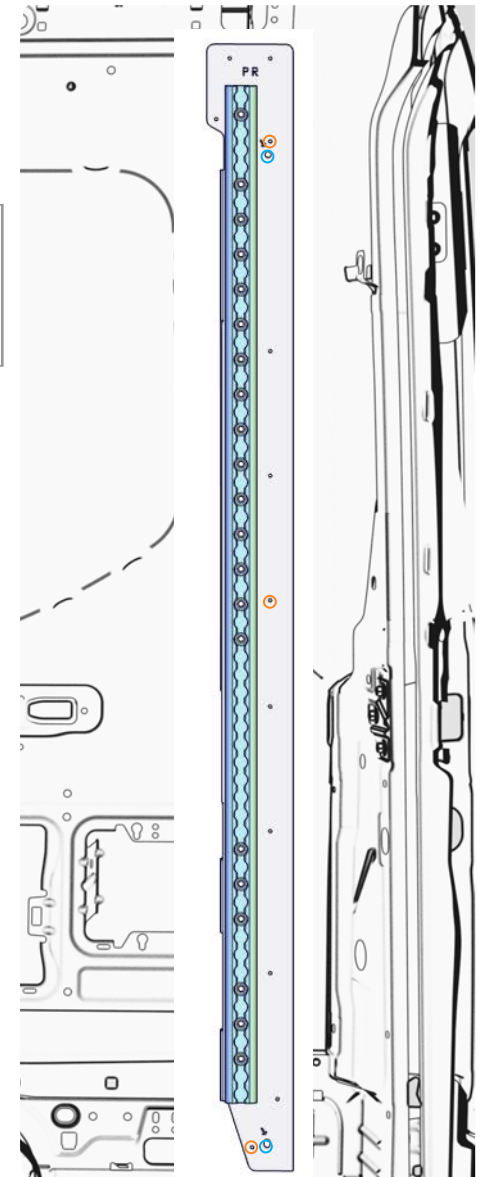


FIG 6

STEP | 04 Install Rivets

4.1 Drilling through all of the Rivet Holes with a 3/16" or similar sized Drill Bit (FIG 7) and painting with a rust preventative paint.

4.2 Install Rivets: After the paint has dried, install the Rivets (FIG 8) .

4.3 Remove the self-tapping screws and replace them with Pop Rivets.



FIG 7



FIG 8

GET THERE WITH WHITE TOP ADVENTURES



info@whitetopadventures.com



thanks!