


WTA



Installation Guide

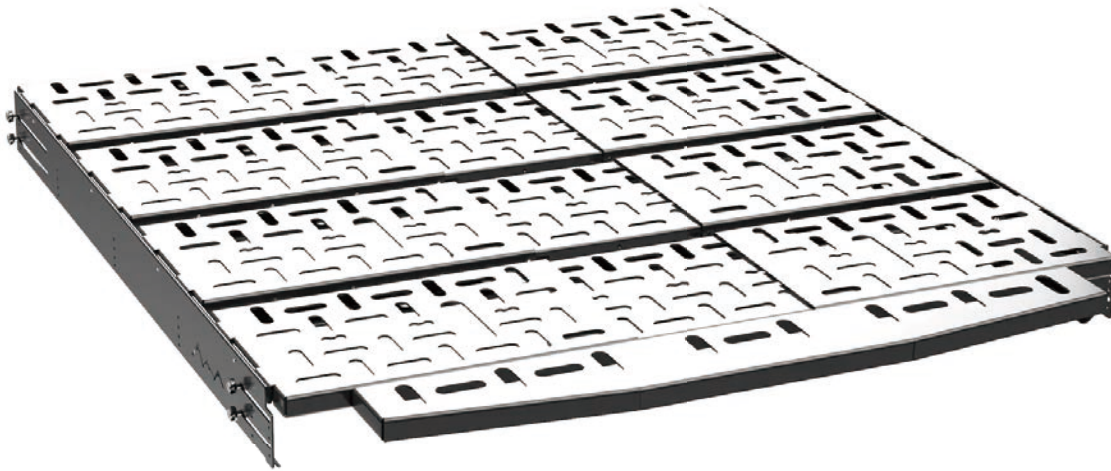


TRANSIT VAN 4-PANEL PLATFORM BED SYSTEM


It is crucial to ensure that all WTA products are assembled and securely attached to your vehicle. Failure to do so may result in automobile accidents, posing a significant risk of bodily injury or even death to yourself and others. As the owner, it is your responsibility to properly assemble and secure WTA products, diligently inspecting the mounting points and attachments before use, and regularly checking for any signs of wear or damage.

To guarantee optimal safety, we strongly advise engaging the services of a professional installer for the installation of any aftermarket accessories to your vehicle. If you lack mechanical experience or are unfamiliar with the installation procedures, it is imperative to have the product installed by a qualified professional or individuals who possess the necessary expertise. Remember, the responsibility lies with you, and it must be taken seriously to ensure the safety of all individuals involved.


PACKAGE CONTENTS

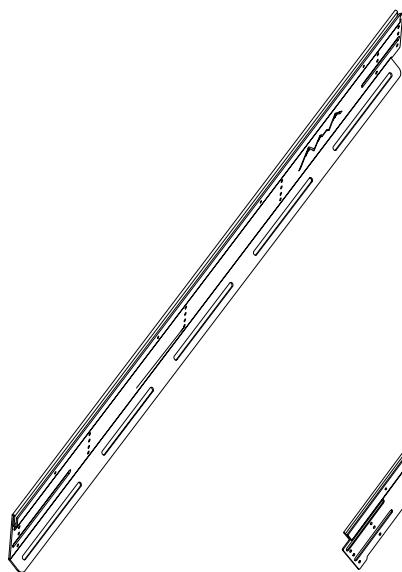


PASSENGER SIDE
BED RAIL
QTY: 1

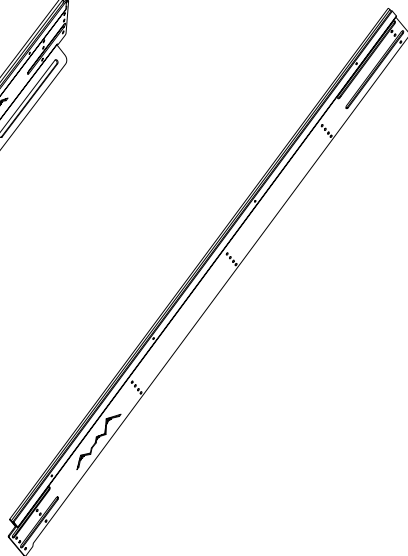


DRIVER SIDE BED
RAIL
QTY: 1

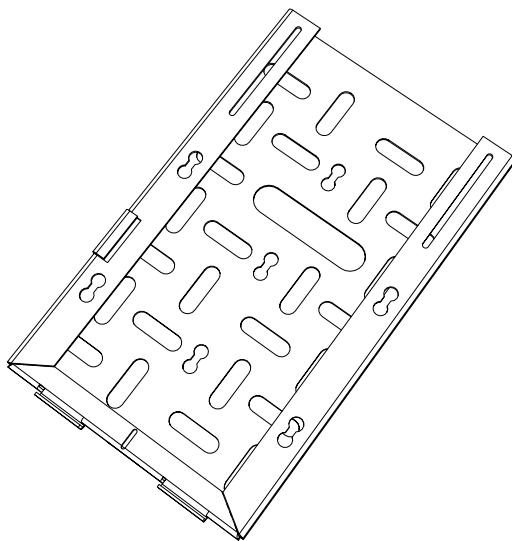


BED PANEL A
QTY: 4

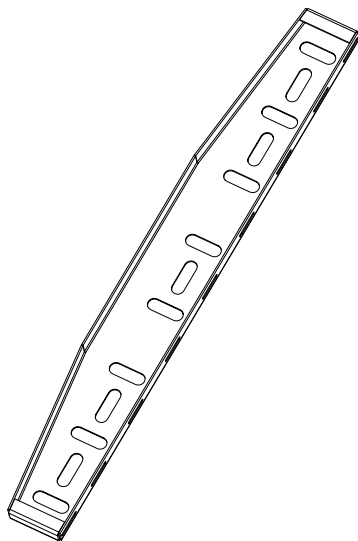

REAR BED PANEL
QTY: 1

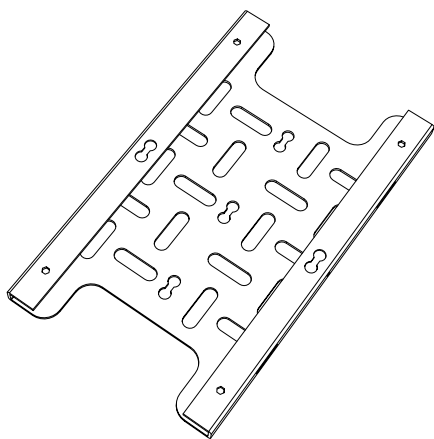


BED PANEL B
QTY: 4

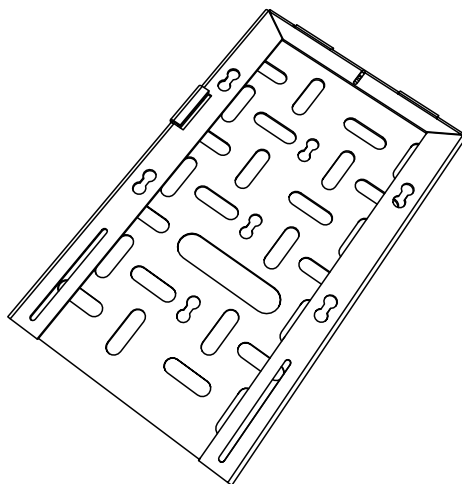


BED PANEL C
QTY: 4

HARDWARE

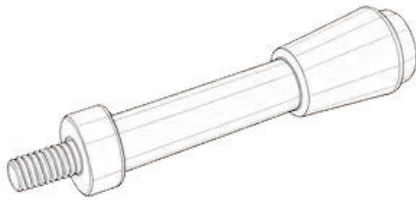


M6 LONG SHOLER THUMB SCREW

QTY: 8

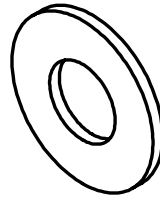


M8 THICK WAHSER

QTY:16

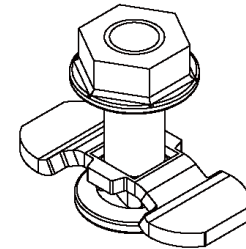


L-TRACK STUD

QTY: 8

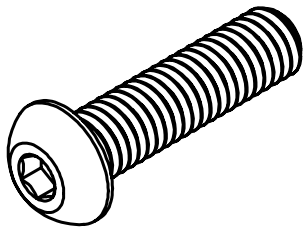


M8*25 BUTTON HEAD SCREW

QTY:25

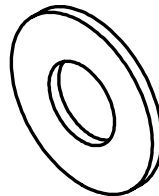

M8 FLAT WAHSER

QTY:18

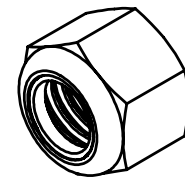

M8 NYLON LOCK NUT

QTY:9

INSTALL



STEP | 01 LAYOUT AND INSTALL PREP

1.1 L-Track Studs are included for installing bed rails to the bed bracket of your Wall Panel Kit


1.2 White top adventures Bed Brackets, you can buy it from our web. Using rivet pin to install to your wall

1.3 Layout all parts ,check the quantity

L-TRACK INSTALL

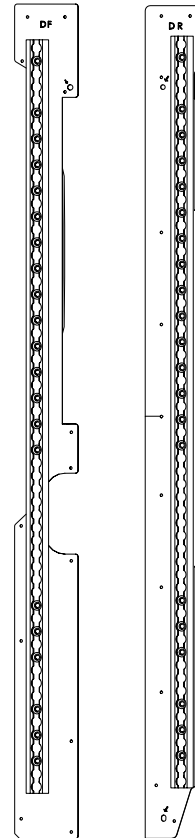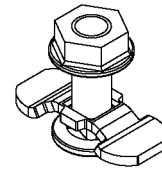

LAYOUT ALL PARTS

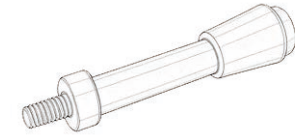

STEP | 02 HEIGHT SELECTION

2.1 Select desired height of bed.


2.2 Lock the Bed rail with L-TRACK STUD.

DRIVER SIDE RAIL

FRONT →



PASSENGER SIDE RAIL

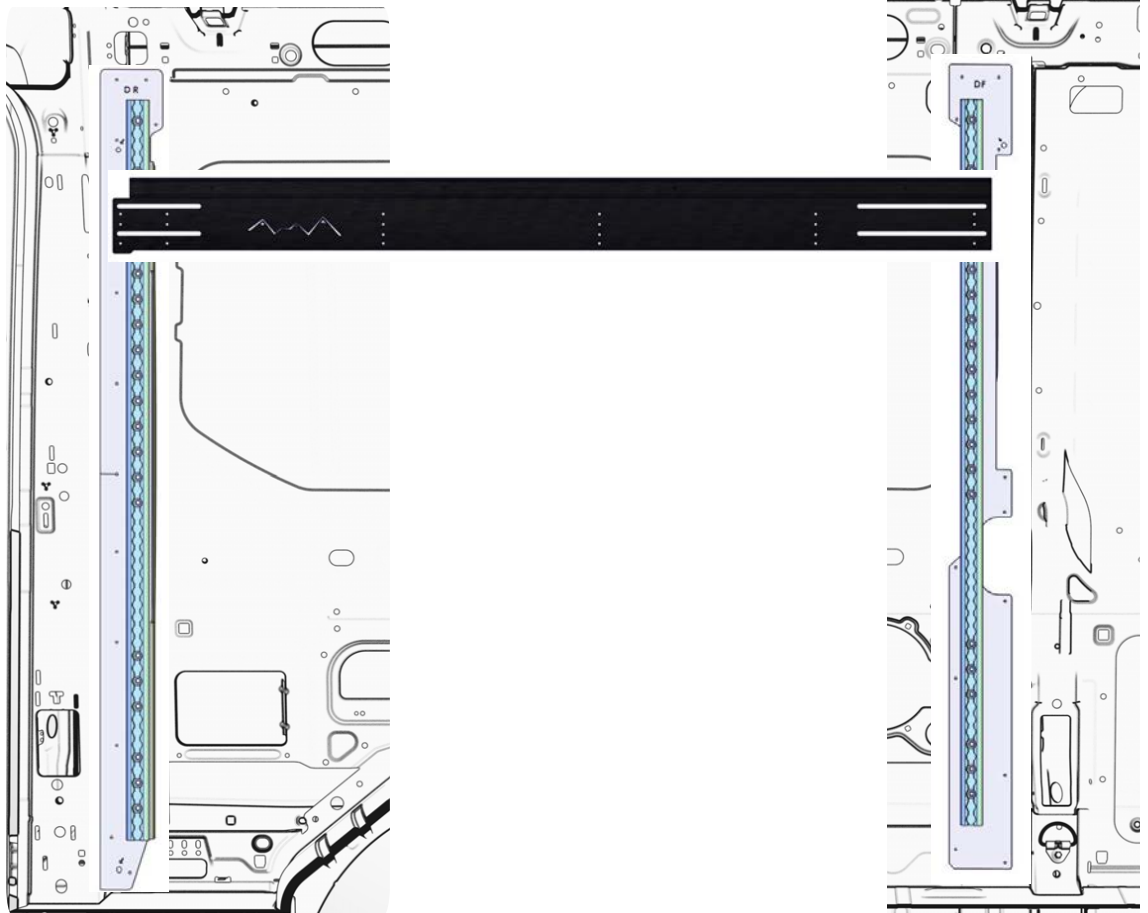



STEP | 03 INSTALL BED PANEL

3.1 Install Panel A,B and C together prep.

3.2 Secure the Panel A and C to Panel B with M8*25 button head screw. But don't tighten it all the way down.

3.3 Put the Bed Panel assembly in the groove of the side bed rail. Adjust the panel to fit the width of van.


3.4 Resite the center panel evenly to Panel A and C, tighten down the M8 button head screw

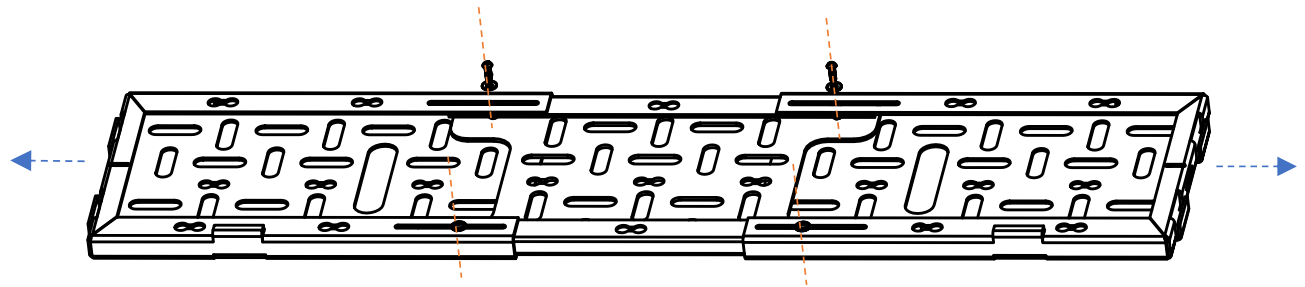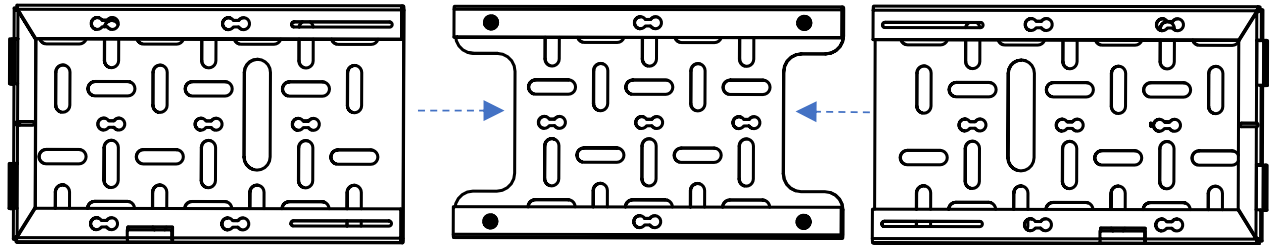

STEP | 04 INSTALL REAR BED PANEL

4.1 Install Rear BED PANEL on one BED PANEL using M8*25 button head screw ,flat washer and M8 nylon lock washer.



4.2 Secure the SUPPORT BLOCK to SIDE BED RAIL with M6*12 button head screw.

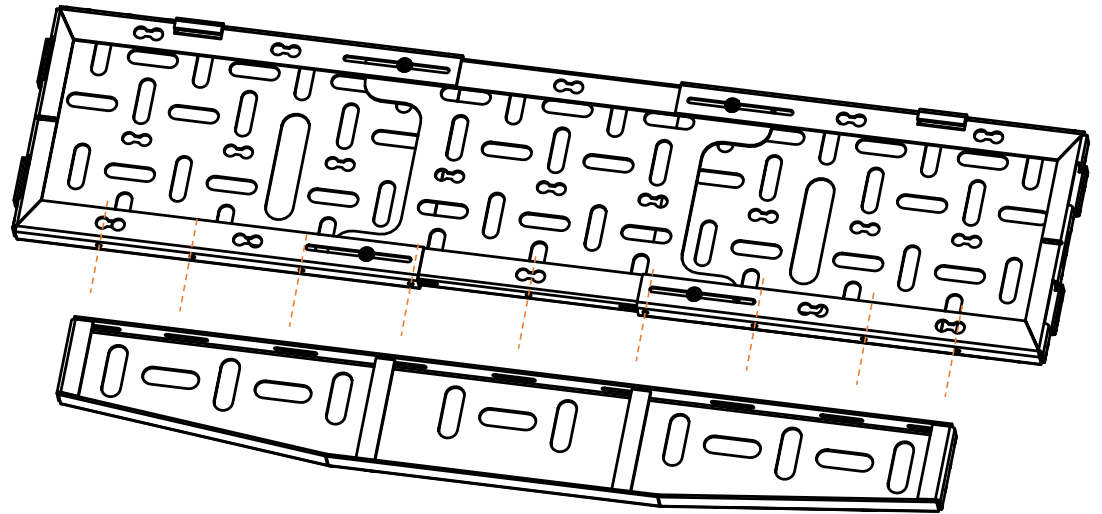

STEP | 05 PLACING BED PANELS

5.1 Once you have all the bed panels assembled, you can simply place the bed panels mounted in the groove of side rails and fasten them to the rails using the M6 long shoulder thumb screw.

NOTE - Periodically inspect the fasteners to ensure they remain tight.

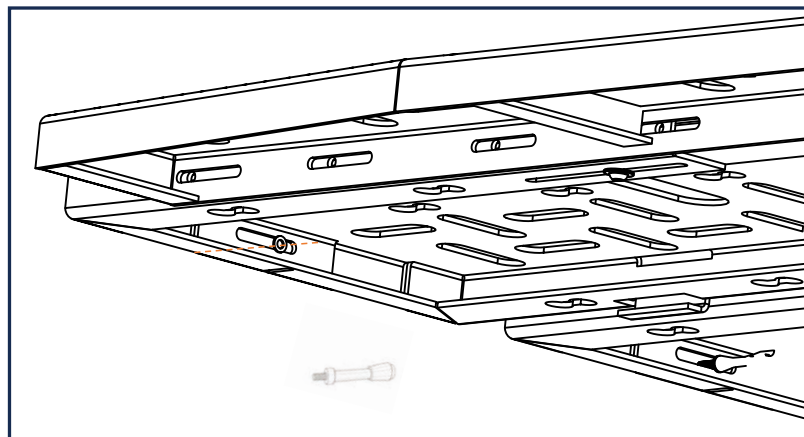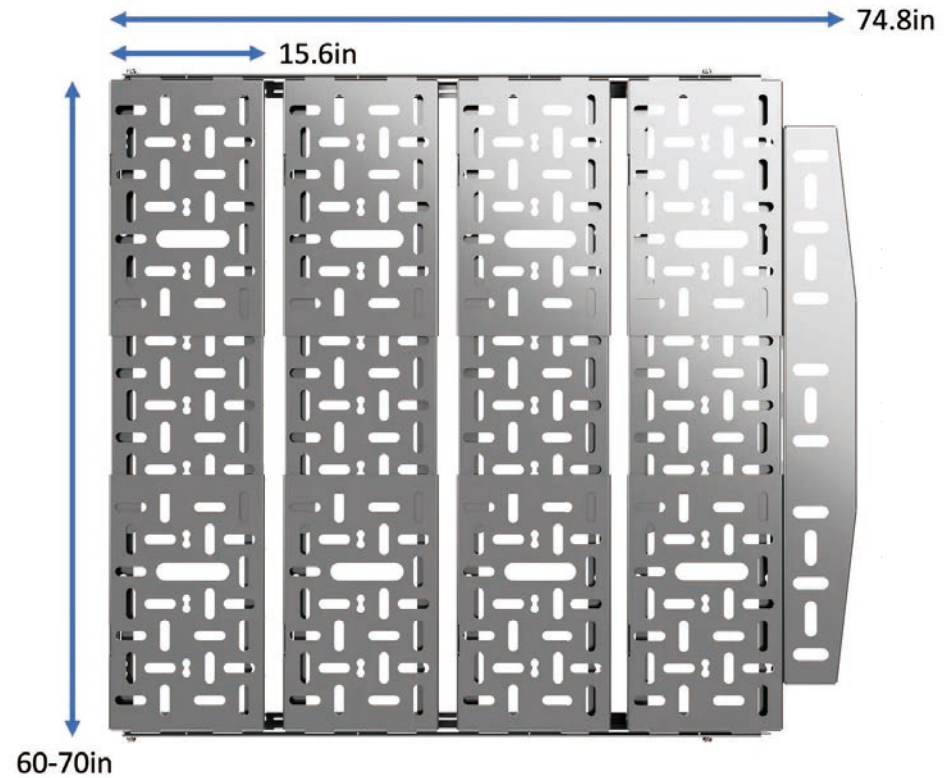

GET THERE WITH WHITE TOP ADVENTURES



info@whitetopadventures.com



thanks!