



FORD TRANSIT

HEADLINER SHELF


What's Included:

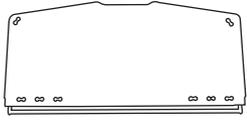


Headliner Shelf




Curtain Rail




2x 90 Degree Curtain Rail Brackets

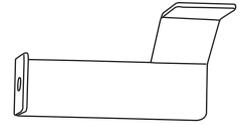


2x Large Mounting Brackets (A)

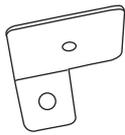

2x Medium Mounting Brackets (B)

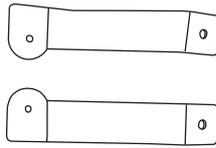


2x Long Skinny Mounting Brackets (C)

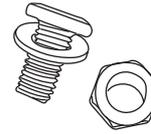

Nuts, Bolts, & Washers


You Will Need:



Phillips head screwdriver




10mm and 14mm Wrench and Sockets

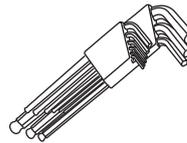


Hex Key Set

1. Bolt the 90 degree curtain rail brackets to either side of the headliner shelf, with the **L-shape facing in**. Mount the curtain rail using the included M6 15 mm bolts, with **washers and nuts**.

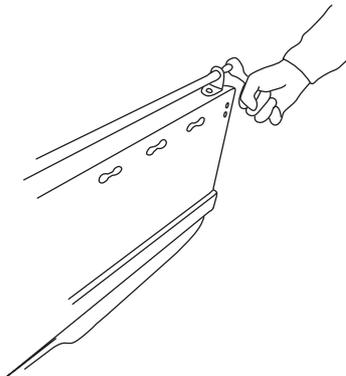


2. Identify the large foam block trim piece located above and to the side of the driver's seat. Using a screwdriver or pry tool, pry up on the plastic clip to remove the foam piece. Don't worry if the plastic clip breaks, as new ones are included for reinstall.

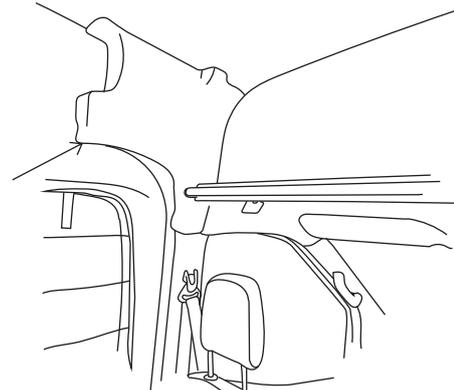


FORD TRANSIT HEADLINER SHELF


3. Insert large mounting bracket (A) where the foam block was and secure with a **1/4" - 20 bolt**. Brackets will face forward as shown in picture. Repeat on the other side.

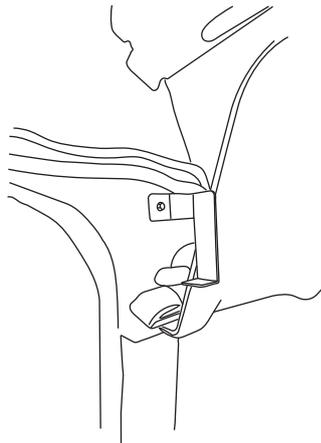


4. Remove and discard the small rectangular plastic piece located in the headliner above your **front door**. Insert medium sized mounting bracket (B) so that the **winglet faces** towards the rear of the van. Secure with an M5 45mm bolt. Do not over tighten. Repeat on the other side.

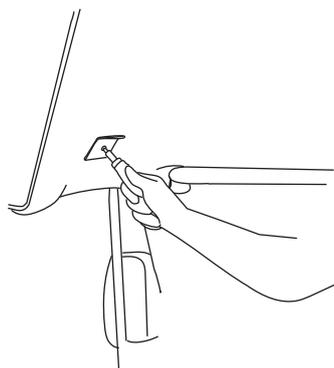


5. Remove and discard the circular plastic plug located at the front of the headliner at the base of your sun visor. Insert the long skinny mounting bracket (C) and secure with a #10 60mm screw. **Do not over tighten**. Repeat on the other side.

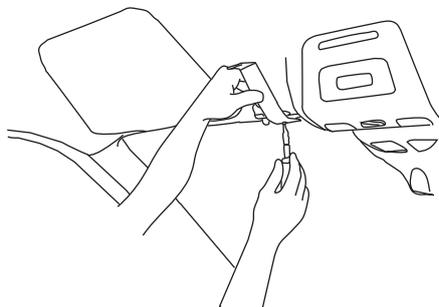


6. Slide the shelf into place, with the felt-lined side up.

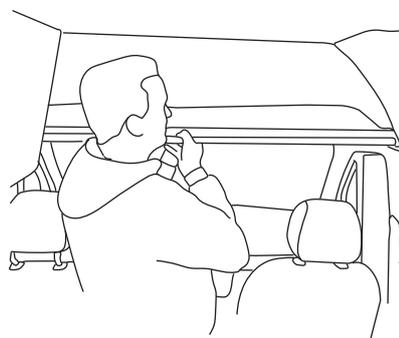

7. Secure the shelf to the brackets using the included M8 15mm bolts. Place the bolt from the bottom side of the shelf, and place a washer then a nut on the top side of the shelf. Tighten to **secure**.

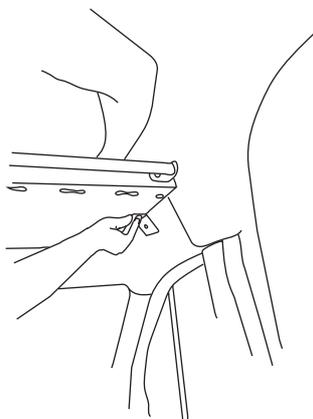


8. Replace the foam pieces on the drivers and passengers side and use a plastic **push clip to lock** the foam piece into place.

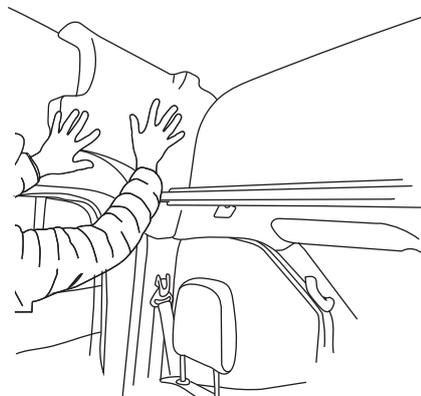


FORD TRANSIT

HEADLINER SHELF WITH GRAB HANDLES


What's Included:

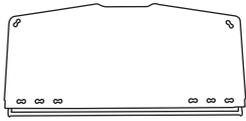


Headliner Shelf

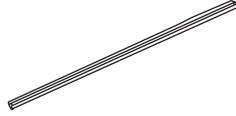

Curtain Rail

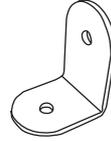

2x 90 Degree Curtain Rail Brackets



2x Large Mounting Brackets



2x Large 90 Degree Shelf Stiffeners




Nuts, Bolts, & Washers

You Will Need:





10mm Spanner or Socket

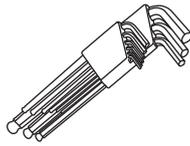


Hex Key Set

1. Before starting install, check your van to see if it includes the middle upright plastic piece above the center of the factory overhead console. If so, remove this plastic fin.
2. Secure the two 90 degree curtain rail L-brackets to either side of the headliner shelf, with a 15mm bolt, washer and nut. Ensure the L-shape faces inward. Install the curtain rod between the two L-brackets, using an M6 15mm bolt.

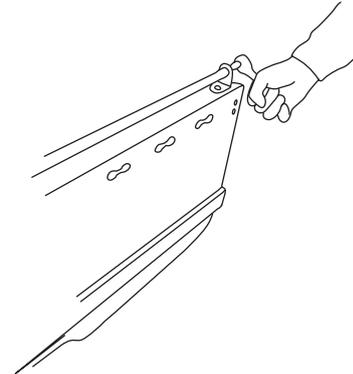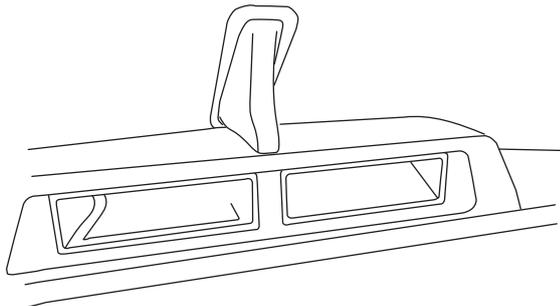


FORD TRANSIT HEADLINER SHELF


- 3.** Remove the bolts from the factory plastic grab handles on the passenger side and drivers side (4 bolts total).

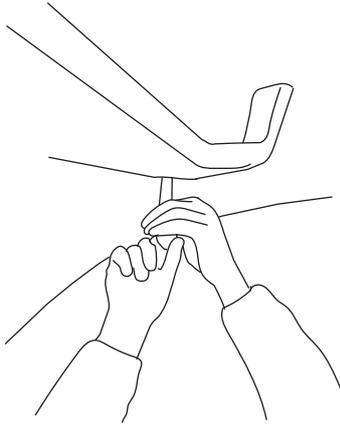


- 4.** Slide your mounting bracket into place, so that the mounting holes in the bracket align with the holes from the now removed bolts.

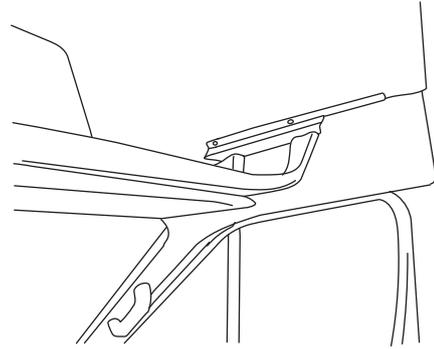

- 5.** Reinstall the factory bolts, with the shorter bolt occupying the hole towards the front of the van.

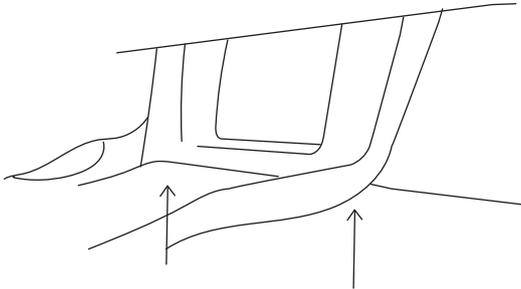

- 6.** Slide the shelf into place, with the felt-lined side up.

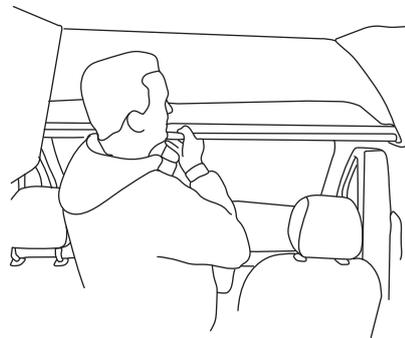

- 7.** Using the 90 degree bracket, install the M6 bolts through all items (both brackets and shelf) and tighten with bolts.

